


sanford[®]
TOUCHING YOUR LIFE EVERYDAY

INSTRUCTION & WARRANTY BOOKLET

INFRARED COOKER

SF51931C

Scanning the QR code gives you access to your product's warranty registration and services.

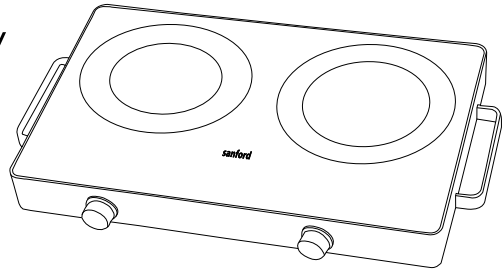

Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

EN ENGLISH



2800 Watts
220-240V~, 50-60Hz
Batch No.: 5193042024



TABLE OF CONTENTS


- Please follow the notices in the Instructions Manual to assemble and use the product.
- Please read and understand the Instructions Manual and keep it properly for future reference.
- If you have any question in use, please contact online service in the required language.

INSTRUCTIONS	03
SAFETY REMINDING	04
CLEANING AND MAINTENANCE	05
TROUBLE SHOOTING	06
TECHNICAL PARAMETERS	06

Thank you for buying this product. Please read and understand this manual carefully and keep it properly for convenience. The pictures in this instruction manual are for reference only, specifications are subject to the physical product.

Thank you for purchasing our products. Please read the instruction manual carefully before using and keep it cautiously for your future reference.

Glass Plate

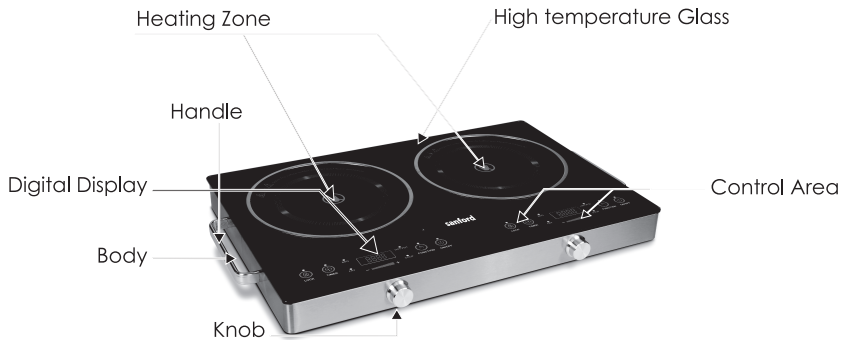

Instruction

1. Plug in, display "--", then press "ON/OFF" , display "ON"
2. then press "FUNCTION" choose disired function.
3. Hot Pot : Default 1200W, can adjust time and power
4. BBQ : Default 500°C, can adjust time and temperature
5. FRY: Default 650°C, can adjust time and temperature
6. SOUP : Default 1400W, can not adjust.

Power:200/400/600/800/1000/1200/1300/1400W


Temperature:200/350/400/450/500/550/600/650°C

7. Press Timer, it shows "0:00", when swing the knob, customer could set working time from 0 minutes to 4 hours.
5. Press "Lock" for 3 second, control panel is locked, press again by 3 seconds to relieve Child lock setting
6. When two burners are working, you could turn off the machine by press the "ON/OFF".

Usable Pans

All flat bottom pots are available. And please limit your food within 4kg.

please limit your food within 4 kg

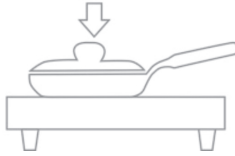

Attention:

1. The cooker is recommended to be installed by professional. Pls never conduct the operation by yourself.
2. The wall and heating area above the table surface shall withstand heat.
3. To avoid danger, the cooker must be installed into a cabinet before use.
4. Applicable cabinet material: wood, marble, resin etc.

Safety Reminding

Never use the infrared cooker hob in high temperature environment.



Never wash the infrared cooker hob with water directly. Steam cleaner is not to be use.



Never have the cooker to work without food in pot, otherwise its operational performance maybe affected and danger may happen.



For sealed foods such as canned goods, please do not heat them before opening their covers so as to avoid any danger of explosion due to heating expansion.



The appliance is not intended to be used by children or handicapped persons, unless they have been supervised by a responsible person to ensure they can use it safely.



Do not place rough or uneven appliances, which may damage the ceramic surface.



If the surface is cracked, pull out the plug to avoid the possibility of electric shock.



Do not put any detergents or flammable materials in the equipment installed under the infrared cooker hob.



Because the hob can generate very high temperature, please use a pot resistant to a temperature of over 200°C.



After being used the corresponding heating zone of the infrared cooker is still hot. Never touch the infrared cooker surface to avoid burn.



If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Cleaning and Maintenance

1. Please shut off the power and pull out the plug before cleaning of the appliance.
2. Clean the appliance until it cools down completely.
3. To remove dirt, please select litmusless detergent.
4. After removing dirt, please use neat wet cloth to clean the unit.
5. Do not clean by water directly, water gets inside may cause malfunction.
6. Keep the ceramic plate and pan clean before cook, otherwise, dirt after charring is very difficult to clean and the plate may get discoloration.
7. You may clean air vent/air entry's dirt by vacuum cleaner to suck up, if there is dirt with oil, add a little litmusless detergent with toothbrush to clean.
8. Don't use caustic impregnates to clean. It may damage the cooker by chemical reaction. Do not use benzene, scrubbing brush or polishing powder to clean the induction cooker.

Trouble Shooting

If there is anything wrong with the cooker, please check it as following sending to repair.

NO.	Problem	Possible causes
1	No indicator light when power "on"	1. Cable/terminal block is loose 2. Broken circuit or blown fuse 3. Power supply stopped
2	If there is "buzz" noise, and the "on/off" light flash, no heating	1. Please check if the pot is available 2. If the pot is in the centre of the ceramic plate
3	Appliance suddenly stops heating during operation	1. Air entrance or outlet blocked 2. Over-heating protection activated 3. Please check if the temperature around is too high 4. If the working time over defaulted working time, or the timer finish
4	No response for the key	Please check the plug is in right place
5	The LED display shows codes Error codes:	E1 Voltage too low<100V E2 Voltage too high>270V: E3 Temperature sensor open/short circuit: E7 Fan damage:

2.Please do not open and repair the unit yourself avoid getting hurt and other risks.

3.If you fail to identify the problem, contact the after sales-service without delay.

Technical Parameters

Model	SF5193IC
Rating voltage	220-240V~
Rating frequency	50-60Hz
Input power	2800W

WARRANTY INSTRUCTIONS

Thank you for purchasing **SANFORD** products, for the sake of the excellent quality of our products, we certify that **SANFORD** products are free of defects in material and workmanship and the end-user is entitled to this warranty subject to the terms and conditions listed below.

(1) The warranty will be effective only if you receive a Confirmation/Approval email and a warranty certificate from **SANFORD**.

(2) No other express warranty either written or oral is applicable to any product. THE DURATION OF ANY IMPLIED WARRANTIES INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY OF HEREIN. **SANFORD** SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS, OR ANY OTHER DAMAGES, DIRECT, OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS APPLICABLE TO THIS PRODUCT.

(3) The warranty covers product failure only. If any product is found defective, **SANFORD** will at its option, repair the product in question. Any replaced parts will become the company's property.

(4) The warranty does not apply to/if (a) the accessories provided with the product. (b) cosmetic damage (c) damage due to improper use or maintenance (d) repair or attempted repair of the product by non-authorized persons (e) damage from accidents, lightning, water, fire, improper ventilation, misuse, alteration, or any cause beyond the control of **SANFORD**. (f) the type of the product is defaced, removed, altered, deleted, or rendered illegible.

(5) **SANFORD** will not be liable for any loss directly or indirectly caused by the breakdown of the equipment, also for any delay in repairing the set due to the non-availability of components.

(6) The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

(7) The warranty terms and conditions of this warranty certificate would be revised without prior notice.

(8) **SANFORD** and its authorized service centers will make every effort to carry out expeditious repairs under this warranty as soon as possible.



LIMITED WARRANTY

Warranty Period **2 Years**

SANFORD hereby warrants, subject to the terms and conditions herein below set forth that should this product become defective by reason of improper workmanship or material during the below specified warranty period, **SANFORD** will repair the same, effecting all necessary parts replacement, without charge for either parts or labour.

REGISTER YOUR NEW SANFORD PRODUCT FOR WARRANTY

Scanning the QR code gives you access to your product's warranty registration and services.



STEP: 1

Register the warranty by scanning the QR code or log on to <http://www.sanfordjapan.com/warranty.html> to access the warranty registration form.

STEP: 2

Fill out the Warranty Registration Form and submit the application after reading and agreeing to the terms and conditions.

STEP: 3

After successful registration, the page will display the notification message "Your entry has been submitted successfully!"

STEP: 4

Our customer service department will verify the warranty registration within 7 days. If your warranty registration is approved, you will receive a Warranty Certificate email. Please keep the certificate to claim the warranty.

If your warranty registration is denied, you will receive an email from us explaining the reason for the rejection.

For more information, Call Toll-Free 800-7263673 (UAE)

Toll-Free 1800-4251163 (INDIA), +966 559039111 (KSA)

+968 9525 8453 (OMAN), +974 3343 7806 (QATAR)

Moreover you may write to sm-dwc@sanford-me.com and service@sanford-me.com or WhatsApp +971 543498627

ضمان محدد

تضمن **سانفورد**، وفقا للشروط والاحكام الموضحة بأنه في حال تعطل هذا المنتج بسبب سوء التصنيع او المواد المستخدمة حسب الفترة الموضحة ادناه، فان **سانفورد** ستقوم بصيانة ذات المنتج، بما في ذلك كافة الاجزاء التي تأثرت من جراء هذا العطل دون أي رسوم مقابل الاجزاء او العمل.

قم بتسجيل منتج سانفورد الجديد خاصتك للحصول على الضمان

يمنحك مسح رمز الاستجابة السريعة إمكانية الوصول إلى تسجيل الضمان الخاص بمنتجك وخدمات الصيانة.

الخطوة ١

تسجيل المنتج عبر مسح رمز الـ كيو آر ضوئيا او الدخول على الرابط
<http://www.sanfordjapan.com/warranty.html>
من اجل الحصول على استمارة التسجيل



الخطوة ٢

املء استمارة التسجيل وقم بتقديمه بعد الاطلاع والموافقة على كافة الشروط والاحكام.

الخطوة ٣

بعد اتمام عملية التسجيل بنجاح، ستظهر لك هذا الرسالة: "لقد تم التقديم بنجاح".

الخطوة ٤

سيقوم قسم خدمة العملاء بمراجعة تسجيلك خلال ٧ ايام، في حال الموافقة على التسجيل الذي قمت به، ستملك رسالة تحتوي على شهادة الضمان في بريدك الالكتروني.
فضلا احتفظ بهذه الشهادة للحصول على الضمان.
في حال قبول تسجيلك بالرفض، ستملك رسالة لتوضيح اسباب الرفض.

للمزيد من المعلومات، يرجى الاتصال بالرقم المجاني 800 7263673 (الامارات العربية المتحدة)

الرقم المجاني 18004251163 (الهند)، +966 559039111 (المملكة العربية السعودية)

+968 95258453 (عمان)، +974 3343 7806 (قطر)

كما بإمكانك ان تراسلنا على البريد الالكتروني: sm-dwc@sanford-me.com وكذلك: service@sanford-me.com

أو على رقم الواتساب: +971 543498627

تعليمات التشغيل

شكرا لشرائك منتجات سانفورد. من اجل ضمان الجودة لمنتجاتنا، نشهد بأن منتجات سانفورد خالية من العيوب في مواد التصنيع والعمل وأن المشتري له الحق في الحصول على هذا الضمان وفقا للشروط التالية:

1. يكون الضمان ساريا فقط في حال تلقيك لرسالة تأكيد/موافقة من شركة سانفورد عبر البريد الالكتروني.
2. لا يوجد ضمان صريح آخر سواء كتابي أو شفوي ينطبق على أي منتج. تقتصر مدة أي ضمانات بما في ذلك الضمان الضمني لقابلية التسويق على مدة الضمان الصريح الوارد في هذه الوثيقة. لا تتحمل شركة سانفورد مسؤولية فقدان استخدام المنتج أو الإنزعا أو الخسارة أو أي أضرار أخرى ، مباشرة أو تكملية ، ناشئة عن استخدام أو عدم القدرة على استخدام هذا المنتج أو عن أي خرق أو انتهاك صريح أو ضمني للضمان، بما في ذلك الضمان الضمني للتسويق، ينطبق على هذا المنتج.
3. يغطي هذا الضمان فشل المنتج في العمل فقط. في حال اكتشاف ان الجهاز يحتوي على عطل ما، ستقوم سانفورد، تطوعا، بصيانة المنتج المذكور. اي اجزاء تم استبدالها تصبح ملكية خاصة بالشركة.
4. لا ينطبق هذا الضمان على أ. الملحقات التي تأتي مع المنتج ب. اعطال كهربائية. ت. عطل بسبب سوء الاستخدام أو الصيانة. ث. صيانة او مطولة صيانة المنتج بواسطة شخص لا يملك الصلاحية. ج. عطل بسبب الحوادث او البرق او الماء او الحريق او سوء التهوية او سوء الاستخدام او التعديل او لاي سبب خارج ارادة سانفورد.
5. لا تتحمل سانفورد مسؤولية فقدان بسبب تعطل الجهاز بشكل مباشر او غير مباشر. كذلك، لاي تأخير في صيانة المنتج بسبب عدم توفر قطع الغيار.
6. يجب ارفاق فاتورة الشراء التي تحتوي على تاريخ شراء المنتج كدليل على صحة التاريخ لبدء صلاحية الضمان.
7. ان شروط واحكام هذا الضمان قابلة للتغيير دون سابق اخطار.
8. ستقوم سانفورد وكافة مراكز الصيانة المعتمدة لديها بكل ما في استطاعتها لصيانة المنتج بالمصورة الكاملة تحت هذا الضمان في اسرع وقت ممكن.

Implementing Your expectations



sanford[®]
TOUCHING YOUR LIFE EVERYDAY

التنظيف والعناية

1. فضلا قم بإيقاف التشغيل وافصل السلك عن الكهرباء قبل تنظيف الجهاز.
2. لا تقم بتنظيف الجهاز قبل ان يبرد تماما.
3. لازالة الاوساخ، استخدم منظف سائل اقل تركيزا.
4. بعد ازالة الاوساخ، استخدم قطعة قماش رطبة ونظيفة لتنظيف الجهاز.
5. لا تنظف الجهاز بالماء مباشرة. حتى لا تتغلغل الى داخل الجهاز.
6. قم بتنظيف سطح الرخام وكذلك المقلاة نظيفتان قبل البدء في الطهي. لان الاوساخ بعد الطهي تصبح عملية ازالتهما مرهقة. كما قد يتغير لون الطبق.
7. يمكنك شطف الاوساخ التي تعلق بفتحات التهوية. يمكنك اضافة القليل من المنظف السائل قليل التركيز الى فرشاة لتنظيف الفتحات.
8. لا تستخدم السوائل الكاوية للتنظيف. قد تضر بالجهاز نسبة للتفاعل الكيميائي. لا تستخدم البزيرين او فرشاة فاشطة او بكرة التلميع لتنظيف الطباخ.

اصحاح الاعطال

اذا كان هناك خطب ما بالطباخ، فضلا قم بمراجعة التالي او اعده الى المركز لتصليحه.

الرقم	المشكلة	السبب
1	لا يوجد ضوء، مؤشر للطاقة	1. اسلك / قفل الجهاز غير مثبت 2. انقطاع في الدائرة الكهربائية او انفجار صمام 3. انقطاع في التيار الكهربائي
2	وجود صوت "بز" وكذلك لمبة التشغيل تومض ولا وجود للحرارة	1. فضلا تأكد من وجود الاناء
3	يتوقف الطباخ عن انتاج الحرارة فجأة أثناء عمله	1. انسداد فتحات التهوية 2. جهاز الحماية من الحرارة الزائدة يعمل 3. ربما حرارة البيئة المحيطة بالطباخ مرتفعة جدا 4. انتهاء المؤقت
4	المفتاح لا يستجيب	تأكد من مقبس الكهرباء،
5	شاشة ليد تعرض المنبه كودات الاخطاء:	E1 E2 E3 E7 الجهد منخفض جدا >100 فولت الجهد مرتفع جدا < 270 فولت مستشعر درجة الحرارة مفتوح/ماس كهربائي ضرر بالمروحة

2. فضلا لا تفتح الجهاز لتصليحه بنفسك حتى لا تتعرض للاصابة.
3. اذا فشلت في تحديد سبب العطل، قم بالاتصال بمركز الصيانة دون تأخير.

المواصفات التقنية

النوع	اس اف 5193 اكي سي
معدل الجهد الكهربائي	220-240 فولت ~
معدل التردد	50-60 هيرتز
الطاقة الداخلة	2800 واط

انتبه:

1. نوصي بتركيب الطباخ بواسطة شخص محترف، لا تحاول تركيبه بنفسك.
2. يجب ان يكون الحائط والاسطح حول الطباخ من النوع الذي يقاوم الحرارة.
3. لتفادي المخاطر، يجب تركيب الطباخ داخل خزانة او اولا قبل تشغيله.
4. مواد الخزانة: الخشب، الرخام، الراتنج وغيرها.

تذكير للسامة

لا تستخدم الطباخ في بيئة ترتفع فيها درجة الحرارة.



تغسل الطباخ بالماء مباشرة، لا تستخدم الغسيل بالبخار.



لا تشغيل الجهاز بوضع المقلاة خالية من الطعام، ان ذلك يؤثر على اداءه وقد يصبح خطرا.



للاطعمة المغطاة مثل الاطعمة المعلبة، فضلا لا تسخنها قبل التخلص من الغطاء، او لا لتفادي اسباب الانفجار او ارتفاع درجة الحرارة.



لا يجب تشغيل الجهاز بواسطة الاطفال او الاشخاص ذوي الاحتياجات الخاصة، الا اذا اولوا الاشراف الكامل لضمان سلامتهم.



لا تضع اجسام فاسية على سطح الطباخ حتى لا يتضرر.



في حال تشقق السطح، قم بفصل السلك عن الكهرباء حتى لا تتعرض لمصدمة كهربائية.



لا تضع ابي منظفات سائلة او مواد قابلة للاشتعال تحت الطباخ.



بما ان الطباخ يقوم بانتاج درجة حرارة عالية، فضل قم باستخدام اواني طبخ مقاومة للحرارة لاكثر من 200 درجة مئوية.



بعد ايقاف الشعلة تظل درجة حرارتها مرتفعة، لا تحاول لمس سطح الطباخ حتى لا تتعرض للاحتراق.




في حال تلف سلك الكهرباء، يجب استبداله بواسطة الشركة المصنعة او عبر احد وكلائها المعتمدين او بواسطة شخص ذو خبرة لتفادي التعرض للاصابة.



كتيب المستخدم

شكرا لشراكتك احد منتجاتنا. فضلا اقرا التعليمات جيدا قبل التشغيل واحتفظ بهذا الكتيب للمستقبل.

الطبق الزجاجي

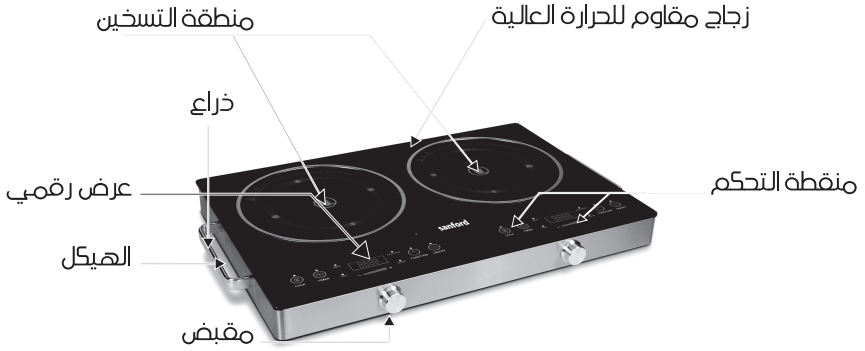

التعليمات


1. قم بالتوصيل بمصدر التيار، يظهر "--"، ثم اضغط على "تشغيل/إيقاف"، يظهر "تشغيل"،
2. ثم اضغط على "الوظيفة" واختار الوظيفة المرغوبة.
3. هوت بوت: افتراضي 1200 وات، يمكن تعديل الوقت والقدر
4. الشواء: الافتراضي 500 درجة مئوية، يمكن تعديل الوقت ودرجة الحرارة
5. القلي: الافتراضي 650 درجة مئوية، يمكن تعديل الوقت ودرجة الحرارة
6. اعداد الحساء: افتراضي 1400 وات، لا يمكن التعديل.

القدر: 200/400/600/800/1000/1200/1300/1400 وات

درجة الحرارة: 200/350/400/450/500/550/600/650 درجة مئوية

7. اضغط على المؤقت سيتم عرض 0:00 عند تحريك المقبض. يمكنك ضبط مدة التشغيل بين 4 ساعات.
8. اضغط على "قفل" لمدة 3 ثوان، سيتم اغلاق لوحة التحكم. اضغط مرة اخرى لمدة 3 ثوان، لابطال القفل.
9. عند تشغيل الشعلتان معا، يمكنك إيقاف الجهاز بالضغط على تشغيل /إيقاف ON/OFF.

فضلا اجعل حجم الطعام في حدود 4 كج.
please limit your food within 4 kg

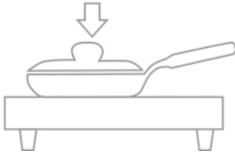

الواني المستخدمة

يمكنك استخدام ابي مقلاة مسطحة. فضلا اجعل حجم الطعام في حدود 4 كج.

قائمة المحتويات

- فضلا اتبع التعليمات الواردة في كتيب المستخدم من أجل تركيب واستخدام المنتج
- فضلا اقرأ مع الفهم كافة التعليمات الواردة في كتيب المستخدم واحتفظ بالكتيب في مكان امن للرجوع اليه لاحقا
- اذا كان لديك أسئلة حول استخدام المنتج، فضلا تواصل مع خدمة العملاء عبر الإنترنت، حسب اللغة التي تحتاجها

التعليمات ٣.

تذكير للسلامة ٤.

التنظيف والعناية ٥.

اصلاح الاعطال ٥.

المواصفات التقنية ٥.

شكرا لشرائك هذا المنتج. فضلا اقرأ مع الفهم كافة التعليمات الواردة في كتيب المستخدم واحتفظ بالكتيب للرجوع اليه لاحقا. ان الصور الواردة في هذا الكتيب هي للتوصيح فقط. مواصفات المنتج الحقيقية هي ما تجدها على المنتج نفسه.


تعليمات
وكتيب الضمان

سانفورد
تعيش تفاصيل يومك

موقد إلكتروني

اس اف ١٩٣ اى سي

يملك مسك رمز الاستجابة السريعة
امكانية الوصول الى تسجيل الضمان الخاص
بمنتجك وخدمات الصيانة.

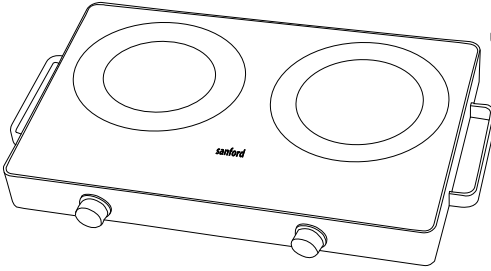

قبل البدء في التركيب، اقرأ هذه التعليمات جيدا. ان اتباع هذه التعليمات
سيسهل عملية التركيب بالشكل الامن والصحيح. اترك كتيب التعليمات
بالقرب من المنتج للاطلاع عليها لاحقا.



AR ARABIC



٢٨٠٠ واط
220-240V~, 50-60Hz
Batch No.: 5193042024

