

**sanford**<sup>®</sup>  
TOUCHING YOUR LIFE EVERYDAY

## INSTRUCTION MANUAL / WARRANTY CARD

**SF3607EO**  
**Electric Oven**

**30L**  
Capacity

**1600**  
Watts



**2 YEARS**  
**WARRANTY**

**CE**  
220-240V~ 50/60Hz



TOUCHING YOUR LIFE EVERYDAY...  
THE EXQUISITE KITCHEN COLLECTION  
FROM SANFORD



sanford®  
TOUCHING YOUR LIFE EVERYDAY



## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions before use or cleaning.
2. Close supervision is necessary when any appliance is used near children.
3. Do not immerse cord, plug, or any part of the appliance in water or other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If the appliance is damaged or broken, do not repair yourself, if the power cord or the plug is broken or damaged, do not repair or change yourself, please send the appliance to qualified service centre for repair or service.
6. When operating the oven, keep at least four inches (ten centimeters) of space on all sides of the oven to allow for adequate air circulation.
7. To disconnect, turn the control to OFF, before removing the plug.
8. Unplug from outlet when not in use and before cleaning. Always hold the plug, but never pull the cord.
9. Allow the appliance to cool before putting on or taking off parts, and before cleaning
10. Extreme caution must be used when moving an appliance containing hot oil or food.
11. Do not cover any part of the oven with metal or cloth, it may cause overheating of the oven
12. Do not place any item on the oven or cover the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Never leave the appliance unattended in working.
15. Oversized foods or metal utensils can not put into the appliance as they may create a fire or risk of electric shock.


16. Extreme caution should be exercised when using containers constructed of anything other than qualified metal or qualified ceramics.
17. Do not place any of the following materials in the oven: plastic, paper, or anything similar.
18. Do not use any accessories other than manufacturer recommended accessories in this oven.
19. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
20. Do not use this appliance for any use other than its intended use.
21. This appliance is for HOUSEHOLD USE only.
22. The glass door is heavy, please hold the handle until the door is completely open, do not let the door fall itself.
23. This appliance is not intended for use by children.
24. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given enough supervision or enough instruction concerning use of the appliance by a person responsible for their safety.
25. The temperature on the surface of this appliance is high in or after working, do not touch.
26. This machine is not allowed to work through outside timer or remote control.

### ACCESSORIES:

- \* BAKE PAN
- \* BAKE RACK
- \* PAN HANDLE
- \* ROTISSERIE SET


### LIST OF COMPONENTS

1. Oven indicator	9. Tray handle
2. Timer	10. Heating elements
3. Heat selector	11. Bottom door clip
4. Temperature selector	12. Rotisserie rod
5. Operation selector	13. Rotisserie handle
6. Door handle	14. Convection
7. Bake rack	
8. Bake pan	

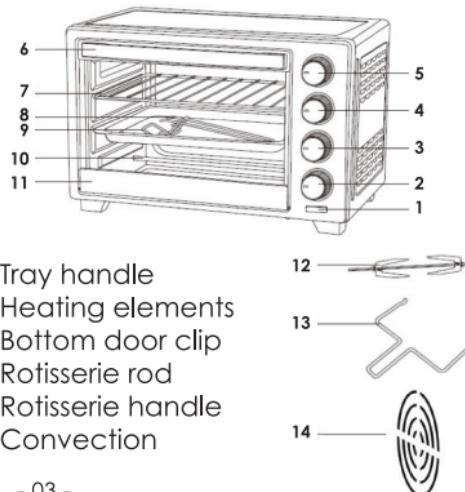


## ROTISSERIE & CONVECTION DIAL

1. OFF
2. Convection
3. Rotisserie
4. Rotisserie & Convection

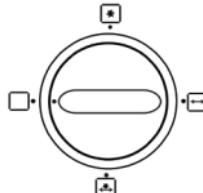


## HEATING SELECTOR DIAL

1. OFF
2. Top heating
3. Bottom heating
4. Top & Bottom heating

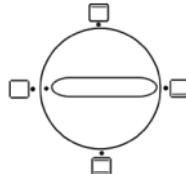

## TIMER DIAL (INSIDE LAMP)

When timer is turned on, the inside lamp is ON.  
When timer is turned off, the inside lamp is OFF.

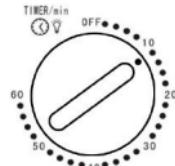

## BEFORE USE

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface.  
Place the oven on a heat resistant surface.
- The feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

## OVEN USE

- Turn the thermostat dial clockwise to the desired temperature.
- Turn the Rotisserie/convection selector dial to the desired position.
- Turn the Heating selector dial to the desired position.
- Turn the timer dial clockwise to the desired cooking time.
- The power light will light up after timer is turned on, and will go out when the timer is turned to OFF.
- When the cooking time is over, the timer will auto shut off and the bell will ring.
- If the cooking is finished earlier than the set cooking time, please turn back the timer to OFF to turn off the oven.

- In the first use of this oven, there might be some light smoke coming out from the oven, this is normal. After 5-10 minutes the smoke will disappear.
- In order to get better cooking performance, it is recommended to pre-heat the oven about 10-15 minutes.

## **ROTISSERIE USE**

1. Put one skewer through the pointed end of the spit, making sure the points of skewer face towards the spit's pointed end. Slide the skewer towards the square end of the spit.
2. Insert the spit directly through the center of the food which you want to roast.
3. Put the other skewer through the pointed end of the spit, making sure the points of skewer face the spit's square end.
4. Put the two skewers into the food, then secure both skewers with the thumbscrews.
5. Make sure the food is centered on the spit.
6. Insert the pointed end of the spit into the drive socket, make sure the square end of the spit rests on the spit support.
7. Plug the oven.
8. Set the thermostat to 250°.
9. Turn the timer to the time which you require, the power indicator will light up. Normally it takes 30 minutes to roast a 2.5Kg(5.5Pd) weight chicken.
10. Set the selector to Rotisserie or Rotisserie & Convection setting, the rotisserie starts rotating.
11. When roasting is completed, turn back the timer to OFF.
12. After the oven is cooled, place the hooks of the rotisserie handle under the grooves on both sides of the spit. Lift the right side of the spit first, move towards right side a little bit, so that the left side of the spit goes out of the drive socket. Then carefully move out the roasted food from the oven.
13. Take the food off the spit.

## **GRILL COOKING**

- Leave the door at the open point.

- Turn the selector to GRILL setting (top heating), and Convection is recommended.
- Turn the temperature dial to 230°C.
- Turn the timer to the desired grill time.
- When the grill cooking is done, turn back the timer to OFF to turn off the oven.

## **AFTER USE**

- Turn back the Timer to OFF.
- Turn the Heating Selector Dial to OFF.
- Turn the Rotisserie & Convection Dial to OFF.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cool before any cleaning or maintenance.

## **MAINTENANCE AND CLEANING**

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- If stains still appear, it is recommended to use soap.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.

Due to the constant development of product functions and designs, we reserve the right to make changes to the product without prior notice.

NEW LIFE !  
NEW BEGINNING !!  
NEW PRODUCTS!!!



8. ضع قرص درجة الحرارة على 250 درجة مئوية
9. ضع قرص المؤقت حسب الرغبة ستنفي لمبة الطاقة. عادة يأخذ الشواه  
دولي 30 دقيقة - 2.5 جرام ) 5.5 بي دي ( من وزن الدجاج
10. ضع قرص الاختيار على وضع السيخ او السيخ/الحمل الحراري. سينبدأ السيخ في  
الدوران

11. بعد الانتهاء، ضع قرص المؤقت في وضع OFF

12. بعد ان يبرد الفرن، ضع مثلك السيخ اسفل الفتحات على الجانبين. ارفع الطرف اليمين  
للسيخة اولاً، اسحب في اتجاه الجانب اليمين قليلاً، حتى يخرج طرف السيخ على اليسار  
الى الخارج. ثم اسحب السيخة كاملة الى الخارج

13. اخرج الطعام من السيخة

### الشواه

- دع الباب مفتوح
- ضع قرص الاختيار على وضع "شواه" ( التسخين العلوي ) و ننصح بالحمل الحراري.
- ضع قرص الحرارة في وضع 230 درجة مئوية
- ضع قرص المؤقت على المدة التي ترغب فيها
- بعد انتهاء، ضع قرص المؤقت على OFF لاغلاق الفرن

### بعد الانتهاء

- ضع قرص المؤقت على OFF مرة اخرى
- ضع قرص اختيار درجة الحرارة على OFF
- ضع قرص اختيار السيخ/الحمل الحراري على OFF
- افصل الوصلة عن التيار
- انتظار حتى يبرد الفرن تماما قبل تنظيفه او فحصه

### العناية والتنظيف

- افصل الجهاز عن التيار واتركه حتى يبرد قبل تنظيفه
- لا تغمر الجهاز في الماء. يمكن تنظيف الاسطح باستخدام قطعة قماش مبللة
- في حال استمرار ظهور البقع، يمكنك استخدام الصابون
- لا تستخدم المواد القاسطة او الخشنة لتنظيف الجهاز
- قم بتنظيف الحجرة الداخلية للفرن باستخدام قطعة قماش نظيفة ومبلاة  
بسبب التطور المستمر لوظائف وتصاميم منتجاتنا، فإننا نحتفظ بحقوق تعديل هذا المنتج  
دون سابق اشعار

## قبل التشغيل

- تأكد من وجود التهوية الكافية حول الفرن
- تأكد من ان الفرن جاف بالكامل
- لا تضع الفرن على سطح خشبي. فعه فوق سطح مقاوم للحرارة
- قد تترك ارجل الفرن بعض العلامات على سطح الطاولة. يمكنك ازالة هذه العلامات باستخدام قطعة قماش مبللة

## استخدام الفرن

- قم بتحريك قرص التحكم في درجة الحرارة في اتجاه عقارب الساعة لاختبار درجة الحرارة المطلوبة
- قم بوضع قرص اختيار سيخ الشواء/ الدحمل الحراري في الوضع الذي ترغب فيه
- قم بتحريك قرص التسخين الى الوضع الذي ترغب فيه
- قم بتحريك قرص المؤقت في اتجاه عقارب الساعة لاختبار المدة التي ترغب فيها
- بعد ضبط المؤقت، ستضي لمبة الطاقة، وستنطفى عند وضع قرص المؤقت على OFF
- بعد انتهاء مدة الطهي، سيتوقف المؤقت تلقائياً مع اصدار صوت جرس
- اذا انتهت مدة الطهي باكرا قبل الفترة المطلوبة، فع قرص المؤقت على OFF لايقاف الفرن
- عند استخدام الفرن لأول مرة، قد يخرج القليل من الدخان الخفيف من الفرن وهي ظاهرة طبيعية ستزول بعد 5 – 10 دقائق
- من اجل الحصول على افضل نتائج الطهي، ننصح بتسخين الفرن مسبقاً لمدة 10 – 15 دقيقة

## استخدام السيخ

1. ادخل سيخاً واحداً من خلال الطرف المدبب تأكد من توجيه السيخة في اتجاه الطرف المدبب. ادخل السيخة نحو الطرف المربع
2. ادخل الطعام نحو منتصف السيخة
3. ضع السيخة الاخرى نحو الطرف المدبب تأكد من توجيه السيخة نحو الطرف المربع
4. ضع الطعام في السيختين اغلق السيختين بالمسامير المخصصة
5. تأكد من وضع الطعام في الوسط
6. ادخل الطرف المدبب من السيخة في القرص
7. قم بتوسيع الفرن

23. لا يجب استخدام هذا الجهاز بواسطة الاطفال

24. لا يجب استخدام هذا الجهاز بواسطة الشخص ذو القصور الجسدي او الحسي )  
بما في ذلك الاطفال ( الا اذا اولوا الاشراف اللازم من قبل اشخاص مسؤولين عن سلامتهم  
مع توضيح طريقة التشغيل ومخاطر الاستخدام الخطى

25. تكون درجة حرارة الاسطح الخارجية للفرن ساخنة حتى بعد الانتهاء من استخدامه. لا تلمس


26. لا تشغلهما جهازكم عن بعد

### الملاحقات:

• مقلة الطهي . رف الطهي

• مقبض المقلة . طقم سيخ الشواء

### قائمة العناصر :

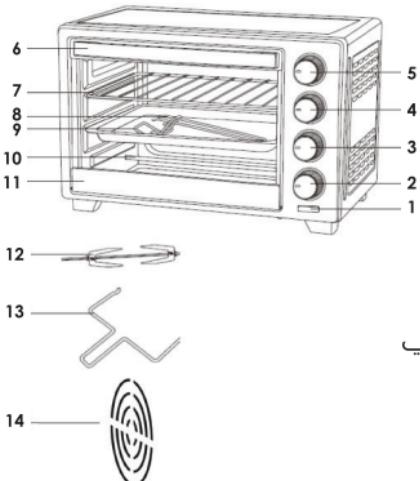

1. مؤشر الفرن . 8. . مقلة الصينية

2. مؤقت . 9. مقبض الشواء

3. اختيار العناصر . 10. عنصر التسخين


4. اختيار درجة الحرارة . 11. مشبك الباب السفلي

5. اختيار المشغل . 12. عمود الشواء

6. مقبض الباب . 13. مقبض الشواء

7. رف الطهي . 14. الحمل الحراري

### قرص اختيار الحرارة:

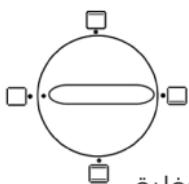


1. ايقاف

2. الحرارة العلوية

3. الحرارة السفلية

4. الحرارة العلوية والسفلى

### قرص الحمل الحراري والشواء:

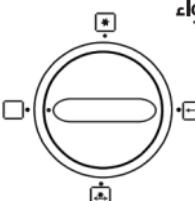

1. ايقاف

2. الحمل الحراري


3. الشواء

4. الشواء والحمل الحراري

### قرص المؤقت (داخل اللمية)

عند وضع المؤقت، داخل اللمية، في وضع التشغيل

عند وضع المؤقت، داخل اللمية، في وضع الايقاف

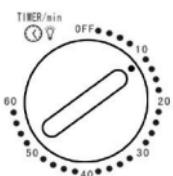

## ارشادات هامة للسلامة

عند استخدامك للجهاز الكهربائية، يجب عليك اتباع اجراءات السلامة الاساسية، و منها:

1. اقرأ كافة التعليمات جيدا قبل التشغيل او التنظيف
2. يجب فرض الاشراف اللازم عند تشغيل الجهاز في مكان تواجد الاطفال
3. لا تغمر وصلة الكهرباء او القابس او اي جزء من الجهاز في الماء او في اي سائل اخر
4. لا تترك الوصلة معلقة على حافة الطاولة او ملائمة للاسطح الساخنة
5. لا تشغيل الجهاز في حال تلف وصلة الكهرباء او الجهاز. لا تحاول اصلاحه بنفسك. فضلا قم بارسال الجهاز الى مركز الصيانة المعتمد لفحصه وصيانته.
6. عند تشغيل الفرن، احتفظ بمسافة 4 بوصات ( 10 سنتيمتر ) في جميع جوانب الفرن من اجل السماح للهواء باكمال دورته
7. لفصل الجهاز، قم باغلاق الجهاز او لا بوضع المفتاح على OFF قبل ازالة وصلة الكهرباء
8. افصل الجهاز عن التيار اذالم تكن في حاجة الى استخدامه وقبل تنظيفه. امسك الوصلة من المنتصف ولا تسحب السلك لفصل التيار
9. دع الجهاز يبرد قبل تركيب او ازالة اي جزء، وقبل التنظيف
10. يجب ت Oxidation the device when it is hot عن تدريج الكهربائية التي تحتوي على السوائل او الزيت او الطعام الساخن داخلها
11. لا تغطي اي جزء من الفرن بقطعة قماش او معدن، لأن ذلك قد يتسبب في زيادة درجة درارة الفرن
12. لا تضع اي جسم فوق الفرن ولا تغطيه
13. توضي الحذر عند ازالة الصينية او عند التخلص من الزيت او السائل الساخن
14. لا تترك الجهاز دون اشراف اثناء عمله
15. لا تضع الاواني كبيرة الدجم او المعدنية فقد تسبب في اندلاع النار او الصدمة الكهربائية
16. توخي الحذر عند استخدام الحاويات المصنوعة من مواد غير المعدن المصرحة به او السيراميك
17. لا تضع اي من المواد التالية داخل الفرن: البلاستيك، والورق والمواد المشابهة
18. لا تستخدم اي ملحقات غير تلك التي توصي بها الشركة المصنعة
19. دائم ارتددي القفازات المخصصة عند وضع او ازالة الاشياء عن الفرن الساخن
20. لا تستخدم هذا الفرن لغير الغراض المخصص من اجلها
21. هذا الجهاز للاستخدام المنزلي فقط
22. الباب الزجاجي ثقيل الوزن، فضلا امسك المقبض حتى ينفتح الباب تماما ولا تدع الباب ينفتح من تلقاء نفسه

Thank you for purchasing **sanford** products, for the sake of excellent quality of our products, we certify that **sanford** products on this warranty are free of defect in material and workmanship and the end user is entitled to this warranty subject to the terms and conditions listed below.

- (1) The warranty will only be effective only if the warranty card is completed and returned to the company for the registration within 14days from the date of purchase, failing which might diminish the rights of warranty.
- (2) No other express warranty either written or oral is applicable to this product.  
THE DURATION OF ANY IMPLIED WARRANTIES INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY OF HEREIN. WE SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.
- (3) The warranty covers product failure only. If any product is found defective, **sanford** will at its option, repair the product in question. Any replaced parts will become the company's property.
- (4) The warranty does not apply to/if (a) the accessories provided with the product (b) cosmetic damage (c) damage due to improper use or maintenance (d) repair or attempted repair of the product by non-authorized persons (e) damage from accidents, lighting, water, fire, improper ventilation, misuse, alteration, or any cause beyond the control of **sanford**. (f) the type of the product is defaced, removed, altered, deleted or render illegible.
- (5) The company will not be liable for any loss directly or indirectly caused from breakdown of the equipment, also for any delay in repairing the set due to non-availability of components.
- (6) The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.
- (7) The warranty terms and conditions of this warranty certificate would be revised without prior notice.
- (8) **sanford** and its authorized service centers will make every effort to carry out expeditious repairs under this warranty as soon as possible.

Please visit us on [www.sanfordworld.com](http://www.sanfordworld.com)  
or write to us at [info@sanfordworld.com](mailto:info@sanfordworld.com)

affix  
stamp

**LIMITED WARRANTY**

**sanford** here by warrants, subject to the terms and conditions herein below set forth that should this product become defective by reason of improper workmanship or material during the below specified warranty period, **sanford** will repair the same , effecting all necessary parts replacement,without charge for either parts or labour.

**WARRANTY PERIOD**

PRODUCT	MODEL	DIVISION	LABOUR
	<b>SF3607EO</b> <b>Electric Oven</b>	Personal or non-income producing Use:	<b>2 Years</b>
		Commercial or income producing Use:	<b>90 Days</b>

The information obtained from you may be used by **sanford** or its affiliated companies for the purpose of direct mail including product information and/or special offers.

**sanford**<sup>®</sup>**END USER'S COPY**  
WARRANTY REGISTRATION CERTIFICATE

## PERSONAL DETAILS:

Mr/Mrs/Ms\* First Name: \_\_\_\_\_ Last Name: \_\_\_\_\_

Address: \_\_\_\_\_

Residence Tel No: \_\_\_\_\_ Office Tel No: \_\_\_\_\_ Mobile No: \_\_\_\_\_

Dealer Name : \_\_\_\_\_ Dealer Address: \_\_\_\_\_



Date of Purchase: \_\_\_\_\_

Invoice No: \_\_\_\_\_

Product Name : **Electric Oven** Model No: **SF3607EO** Serial No: \_\_\_\_\_

Dealer's Stamp :  
[Please mail back within 14 days from the date of purchase]



**sanford<sup>®</sup>**  
Electronics &  
Home Appliances

**1500 Plus Products**



Visit us on  
**[www.sanfordworld.com](http://www.sanfordworld.com)**

For more inquiry  
you may please write to us at  
**[info@sanfordworld.com](mailto:info@sanfordworld.com)**

---

صنع في الصين