


sanford®
TOUCHING YOUR LIFE EVERYDAY

INSTRUCTION & WARRANTY BOOKLET

TWIN TUB WASHING MACHINE

SF829WM

Scan this QR code and register
for the warranty within 14 days
of the purchase.

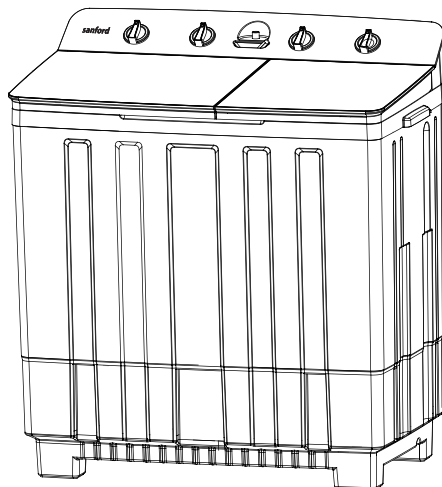

EN ENGLISH

Before beginning installation, read these instructions carefully.
This will simplify installation and ensure that the product is
installed correctly and safely. Leave these instructions near the
product after installation for future reference.



800 Watts
220-240V~50/60Hz
Batch No.: 829032023



www.sanfordjapan.com | info@sanfordworld.com

صنع في الصين


TABLE OF CONTENTS

- Please obey the notices in the Instructions Manual to assemble and use the product.
- Please read and understand the Instructions Manual and keep it properly for future reference.
- If you have any question in use, please contact online service in the required language.

Machine components	3
Preparation before wash	3
Safety instructions	5
Troubleshooting	5
Maintenance	6
Washing procedures	6
Safety precautions	8
Warranty instructions	9


Thank you for buying this product. Please read and understand this manual carefully and keep it properly for convenience. The pictures in this instruction manual are for reference only, specifications are subject to the physical product.

Machine Components

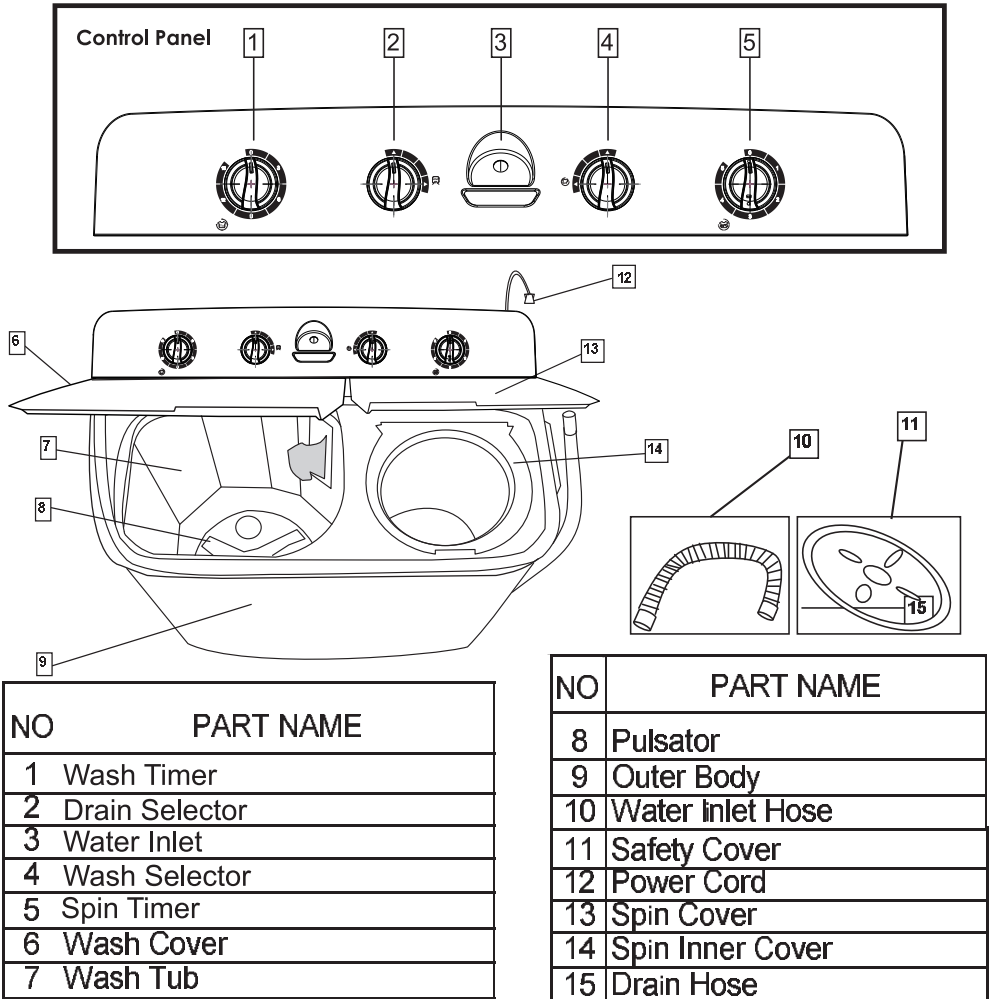


PREPARATION BEFORE WASH

1) Place the drain hose into the drainage pipe or sink



2) Plug the power supply cord to the electrical outlet but be sure to check first if the voltage corresponds to the rating label of the appliance.

3) Insert the water inlet hose into water inlet connector.

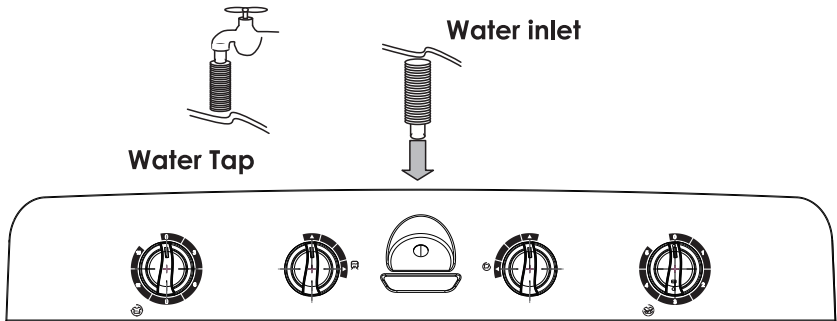

4) Select the water level according to the quantity of laundry by referring to water level marking.

Cleaning the lint filter

* The lint filter must be used during each time of washing.

* The lint filter must be cleaned immediately each time after use.

1) Dismantling the lint filter:

Hold the filter frame as shown in picture, gently press downward and pull off from the filter frame.


2) Cleaning the filter:

Wash the filter while it is still wet. Wash only with plain water.

After wash, dry it. Avoid from drying under direct sunlight.

3) Installing the filter:

Insert the bottom part of the filter frame into the slot, and then gently push the filter in place.

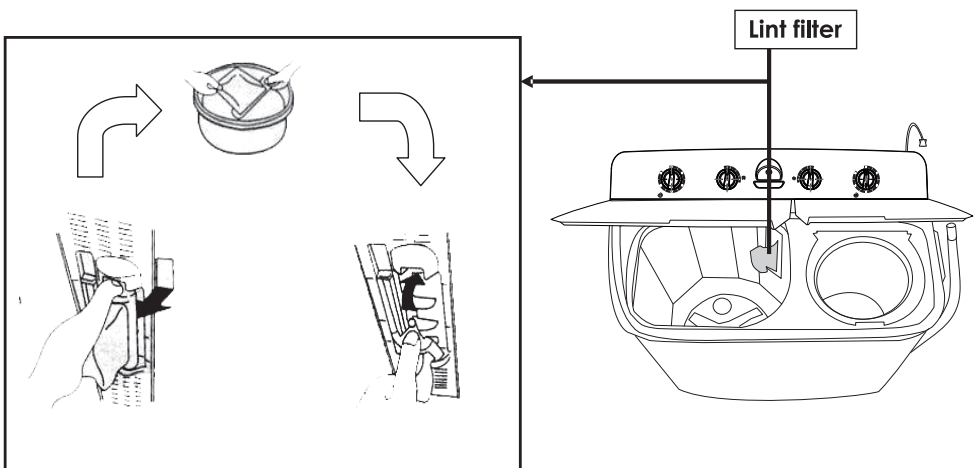

SAFETY INSTRUCTIONS

*If the plug at the end of the power supply cord is damaged, do not attempt to fix it without electrical knowledge. Seek advice from expert or contact qualified technician.



*Do not share one power outlet with other electrical appliances. Do not use unapproved power source. Keep the plug strip clean.



*Forbid children from playing near the machine.



*Never put your hand in the tub while it is running.



*Keep machine away from heat-generating equipment.



* Avoid exposure to direct sunlight.

*Do not place the machine in the bathroom. Such action may damage the electrical insulation and cause body rust.



*Do not put heavy or hot things on top of the machine.



*Do not wash waterproof clothes like rain-coat, as this may cause an abnormal vibration during the wash cycle.



*Do not wash laundry soaked with petrol and organic solvent.



*Place machine on flat solid surface



TROUBLESHOOTING

Before you call for technician or send your machine for repair, please check from this troubleshooting list :

* Do not attempt to repair the machine by yourself .

Problem	Possible Causes
The machine does not work.	* Is the power cut ? * Is the power supply cord connected to a power outlet ? * Is the pulsator tangled with something ?

Problem	Possible Causes
Unable to drain.	* Has the drain hose been lowered ? * Is the drain hose frozen ? * Is the drain hose blocked ? * Have any clothes fallen outside of the spin tub ?
Abnormal sound while washing.	* Are there any loose articles in the wash tub ?
There is an abnormal sound and/or violent vibration while spinning.	* Is the machine placed on a flat and solid ground ? * Has the spinner cap been placed into the spin tub ? * Have any clothes fallen outside of the spin tub ? * Is there too much laundry in the spin tub ?

MAINTENANCE

Please unplug the power supply cord before performing any disposal . There will be lint left behind in the overflow filter and the lint filter after each time of used. These filters need to be cleaned frequently in order to maintain the top performance of the machine.

Cleaning Instructions for machine:

- * Clean the machine with a soft damp cloth.
- * Do not spray water directly onto the machine.
- * If the machine is too dirty , use a neutral detergent to clean
- * Do not use petroleum-based detergents to clean the machine , as this will damage the appearance.



WASHING PROCEDURE

A) Washing

1) Water Inlet



Select the water lever to the desired position.

2) Add in water and dissolved detergent to make the water reach the expected level. Operate the machine to stir the detergent evenly by turning the Wash Knob.

3) Put in laundry.

4) Select wash duration according to the weight of laundry.

5) Select washing type according to the weight of laundry. After each washing operation end's , set the Wash Selector to Drain.

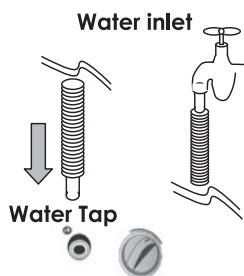

B) Drain the water

Since the washing machine has a drain pump, the water will flow faster upon turning the Drain Selector to Drain position. Be sure to turn Drain Selector immediately back to Normal position when the water is completely gone from the Wash tub.




C) Intermediate -Spin (Removing Detergent/Dry)

1) Move laundry from wash tub to spin tub.




2) Spin to remove dissolved detergent

- Arrange laundry uniformly in the spin tub without stacking them all on one side. An unbalance spin tub may cause abnormal vibration and noise.
- Press the laundry down firmly and place the spinner cap on top of them.
- After rinsing, close the outer cover of the spin tub and spin for 1 minute.

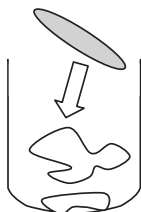

Place Safety Cover

Press down firmly

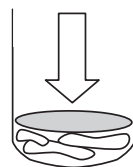

3) Soak Rinse

- Place the laundry into the wash tub, and then select suitable washing type.
- Select the water level . (Select the water level according to the amount of laundry)
- Rinse :- Set the timer to O - 5 minutes and let it rinse.

4) Dry Spin

- Arrange laundry uniformly in the spin tub without stacking them all on one side. An unbalance spin tub may cause abnormal vibration and noise.
- Press the laundry down firmly and place the safety cover on top of them.
- Select suitable spinning duration according to the quantity of laundry. (1 minute, 3 minutes, 5 minutes)

*An unbalance spin tub may cause abnormal vibration or noise.
If such incident occur, open the cover of the spin tub and rearrange the laundry, then continue the spinning operation .

Safety precautions

- Please insert the power cord into a rated voltage outlet.
- When the machine is in use, place the power plug in a location where it can be easily inserted and extracted by hand. Be sure to remove the plug if power failure occurs, when moving or cleaning the machine, or when the machine is idle
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use only the supplied hose set for the connection. Never reuse old hose sets!
- Do not place the machine in a damp place like the bathroom and never wash it with water. Do not place wet laundry on the control panel.
- Do not use water warmer than 50°C.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

WARRANTY INSTRUCTIONS

Thank you for purchasing **SANFORD** products, for the sake of the excellent quality of our products, we certify that **SANFORD** products are free of defects in material and workmanship and the end-user is entitled to this warranty subject to the terms and conditions listed below.

(1) The warranty will be effective only if you receive a Confirmation/Approval email and a warranty certificate from **SANFORD**.

(2) No other express warranty either written or oral is applicable to any product. THE DURATION OF ANY IMPLIED WARRANTIES INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY OF HEREIN. **SANFORD** SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS, OR ANY OTHER DAMAGES, DIRECT, OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS APPLICABLE TO THIS PRODUCT.

(3) The warranty covers product failure only. If any product is found defective, **SANFORD** will at its option, repair the product in question. Any replaced parts will become the company's property.

(4) The warranty does not apply to/ if (a) the accessories provided with the product. (b) cosmetic damage (c) damage due to improper use or maintenance (d) repair or attempted repair of the product by non-authorized persons (e) damage from accidents, lightning, water, fire, improper ventilation, misuse, alteration, or any cause beyond the control of **SANFORD**. (f) the type of the product is defaced, removed, altered, deleted, or rendered illegible.

(5) **SANFORD** will not be liable for any loss directly or indirectly caused by the breakdown of the equipment, also for any delay in repairing the set due to the non-availability of components.

(6) The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

(7) The warranty terms and conditions of this warranty certificate would be revised without prior notice.

(8) **SANFORD** and its authorized service centers will make every effort to carry out expeditious repairs under this warranty as soon as possible.




LIMITED WARRANTY

Warranty Period	2 Years
-----------------	---------

SANFORD hereby warrants, subject to the terms and conditions herein below set forth that should this product become defective by reason of improper workmanship or material during the below specified warranty period, **SANFORD** will repair the same, effecting all necessary parts replacement, without charge for either parts or labour.

REGISTER YOUR NEW SANFORD PRODUCT FOR WARRANTY

The product must be registered for warranty within 14 days from the date of purchase. To register your product you'll need the model number, serial number and invoice.

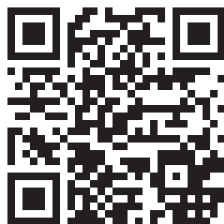

STEP: 1

Register the warranty by scanning the QR code or log on to <http://www.sanfordjapan.com/warranty.html> to access the warranty registration form.

STEP: 2

Fill out the Warranty Registration Form and submit the application after reading and agreeing to the terms and conditions.

STEP: 3

After successful registration, the page will display the notification message "Your entry has been submitted successfully!"

STEP: 4

Our customer service department will verify the warranty registration within 7 days. If your warranty registration is approved, you will receive a Warranty Certificate email. Please keep the certificate to claim the warranty.

If your warranty registration is denied, you will receive an email from us explaining the reason for the rejection.

For more information, Call Toll-Free 800-7263673 (UAE)

Toll-Free 1800-4251163 (INDIA), +966 559039111 (KSA)

+968 9525 8453 (OMAN), +974 3343 7806 (QATAR)

Moreover you may write to sm-dwc@sanford-me.com and service@sanford-me.com or WhatsApp +971 543498627

ضمان محدد

تضمن **سانفورد**، وفقاً للشروط والاحكام الموضحة بأنه في حال تعطل هذا المنتج بسبب سوء التصنيع او المواد المستخدمة حسب الفترة الموضحة ادناه، فان **سانفورد** ستقوم بصيانة ذات المنتج، بما في ذلك كافة الاجزاء التي تأثرت من جراء هذا العطل دون أي رسوم مقابل الاجزاء او العمل.

قم بتسجيل منتج سانفورد الجديد خاصتك للحصول على الضمان

يجب تسجيل هذا المنتج للحصول على الضمان خلال ١٤ يوماً من تاريخ الشراء. من اجل تسجيل منتجك، عليك ارفاق رقم المنتج والرقم التسلسلي والفاتورة.

الخطوة ١

تسجيل المنتج عبر مسح رمز الـ كيو آر ضوئياً او الدخول على الرابط
<http://www.sanfordjapan.com/warranty.html>
من اجل الحصول على استمارة التسجيل



الخطوة ٢

املء استمارة التسجيل وقم بتقديمه بعد الاطلاع والموافقة على كافة الشروط والاحكام.

الخطوة ٣

بعد اتمام عملية التسجيل بنجاح، ستظهر لك هذا الرسالة: "لقد تم التقديم بنجاح".

الخطوة ٤

سيقوم قسم خدمة العملاء بمراجعة تسجيلك خلال ٧ ايام، في حال الموافقة على التسجيل الذي قمت به، ستصلك رسالة تحتوي على شهادة الضمان في بريدك الالكتروني. فضلاً احتفظ بهذه الشهادة للحصول على الضمان. في حال قوبل تسجيلك بالرفض، ستصلك رسالة لتوضيح اسباب الرفض.

للمزيد من المعلومات، يرجى الاتصال بالرقم المجاني 800 7263673 (الامارات العربية المتحدة)

الرقم المجاني 18004251163 (الهند)، +966 559039111 (المملكة العربية السعودية)

+968 84539525 (عمان)، +974 78063343 (قطر)

كما بإمكانك ان ترسلنا على البريد الالكتروني: sm-dwc@sanford-me.com وكذلك: service@sanford-me.com

أو على رقم الواتساب: +971 543498627

تعليمات التشغيل

شكرا لشرائك منتجات سانفور د. من اجل ضمان الجودة لمنتجاتنا، نشهد بأن منتجات سانفور د خالية من العيوب في مواد التصنيع والعمل وأن المشتري له الحق في الحصول على هذا الضمان وفقا للشروط التالية:

1. يكون الضمان ساريا فقط في حال تلقىك لرسالة تأكيد/موافقة من شركة سانفور د عبر البريد الالكتروني.
2. لا يوجد ضمان صريح آخر سواء كتابي أو شفوي ينطبق على أي منتج. تقتصر مدة أي ضمانات بما في ذلك الضمان الضمني لقابلية التسويق على مدة الضمان الصريح الوارد في هذه الوثيقة. لا تتحم شركة سانفور د مسؤولية فقدان استخدام المنتج أو الإنزعا أو الخسارة أو أي أضرار أخرى ، مباشرة أو تكملية ، ناشئة عن استخدام أو عدم القدرة على استخدام هذا المنتج أو عن أي خرق أو انتهاك صريح أو ضمني للضمان، بما في ذلك الضمان الضمني للتسويق، ينطبق على هذا المنتج.
3. يغطي هذا الضمان فشل المنتج في العمل فقط. في حال اكتشاف ان الجهاز يحتوي على عطل ما، ستقوم سانفور د، تطوعا، بصيانة المنتج المذكور. اي اجزاء تم استبدالها تصبح ملكية خاصة بالشركة.
4. لا ينطبق هذا الضمان على أ. الملحقات التي تأتي مع المنتج ب. اعطال كهربائية. ت. عطل بسبب سوء الاستخدام أو الصيانة. ث. صيانة أو محاولة صيانة المنتج بواسطة شخص لا يملك الصلاحية. ج. عطل بسبب الحوادث أو البرق أو الماء أو الحريق أو سوء التهوية أو سوء الاستخدام أو التعديل أو لأي سبب خارج ارادة سانفور د.
5. لا تتحمل سانفور د مسؤولية فقدان بسبب تعطل الجهاز بشكل مباشر أو غير مباشر. كذلك، لأي تأخير في صيانة المنتج بسبب عدم توفر قطع الغيار.
6. يجب ارفاق فاتورة الشراء التي تحتوي على تاريخ شراء المنتج كدليل على صحة التاريخ لبدء صلاحية الضمان.
7. ان شروط واحكام هذا الضمان قابلة للتغيير دون سابق اخطار.
8. ستقوم سانفور د وكافة مراكز الصيانة المعتمدة لديها بكل ما في استطاعتها لصيانة المنتج بالمورة الكاملة تحت هذا الضمان في اسرع وقت ممكن.

(3) شطف الغسيل المنقوع

- ضع الغسيل في حوض الغسيل، ثم اختر نوع الغسيل المناسب
- حدد مستوى الماء (حسب كمية الغسيل)
- الشطف: اضبط المؤقت على 5-0 دقائق واتركه يشطف

(4) التجفيف:

- قم بترتيب الغسيل بشكل موحد في حوض التنشيف دون تكديسهم جميعًا على جانب واحد، فقد يتسبب حوض التنشيف غير المستقر في حدوث اهتزاز وضوضاء غير طبيعية
- اغط على الغسيل بقوة وضع الغطاء الدوار فوقه
- حدد مدة العصر المناسبة وفقًا لكمية الغسيل (دقيقة، 3 دقائق، 5 دقائق)


قد يتسبب حوض التنشيف غير المتوازن في حدوث اهتزازات وضوضاء غير طبيعية.
في حالة حدوث مثل هذا الأمر، افتح غطاء وحدة العصر وأعد ترتيب الغسيل ثم استمر في عملية العصر.

احتياطات السلامة

- يرجى إدخال سلك الطاقة في منفذ الجهد المقنن.
- عندما تكون الآلة قيد الاستخدام ، ضع قابس الطاقة في مكان يسهل إدخاله واستخراجه يدويًا. تأكد من إزالة القابس في حالة حدوث انقطاع في التيار الكهربائي ، أو عند تحريك الجهاز أو تنظيفه ، أو عندما يكون الجهاز في وضع الخمول
- في حالة تلف سلك الإمداد، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة التابع لها أو الأشخاص المؤهلين بشكل مشابه لتجنب الخطر.
- استخدم فقط الخرطوم المزود والمجهز للتوصيل. لا تقم أبدًا بإعادة استخدام مجموعات الخراطيم القديمة!
- لا تضع الجهاز في مكان رطب مثل الحمام ولا تغسله بالماء أبدًا. لا تضع ملاس مبللة على لوحة التحكم.
- لا تستخدم الماء الدافئ الذي تزيد درجة حرارته عن 50 درجة مئوية.
- هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص الذين يعانون من ضعف القدرات الجسدية أو الحسية أو العقلية ، أو نقص الخبرة والمعرفة (بما في ذلك الأطفال)، ما لم يتم منحهم الإشراف مع توضيح التعليمات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم . يجب مراقبة الأطفال للتأكد من أنهم لا يلعبون بالجهاز.

جرات الغسيل


Water Tap

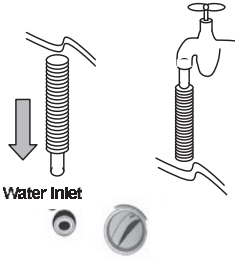

(A) الغسيل:

1. تزويد الماء: حدد مستوى الماء إلى الموضع المطلوب.
2. أضف الماء والمنظفات المذابة حتى تصل المياه إلى المستوى المتوقع عن طريق تدوير مقبض الغسيل.
3. ضع الغسيل.
4. حدد مدة الغسيل وفقًا لوزن الغسيل.
5. بعد انتهاء كل عملية غسيل، اضبط محدد الغسيل على التمرير.

n



(B) تمرير الماء:

نظرًا لأن الغسالة مزودة بمضخة للتمرير، فسوف يتدفق الماء بشكل أسرع عند تشغيل محدد التمرير على وضع التمرير. تأكد من إعادة محدد التمرير فورًا إلى الوضع الطبيعي عندما يختفي الماء تمامًا من حوض الغسيل.

(C) العمر والتجفيف بشكل متوسط - (إزالة المنظف / التجفيف)

1. انقل الغسيل من حوض الغسيل إلى حوض التنشيف

(2) قم بالتدوير لإزالة المنظفات المذابة

a- قم بترتيب الغسيل بشكل موحّد في حوض التنشيف دون تكديسهم

جميعًا على جانب واحد، فقد

يتسبب حوض التنشيف غير المستقر في حدوث اهتزاز وضوضاء غير طبيعية


b- اضغط على الغسيل بقوة وضع الغطاء الدوار فوقه

c- بعد الشطف، أغلق الغطاء الخارجي لحوض التنشيف وقم بتشغيله


لمدة دقيقة واحدة



Place Safety Cover

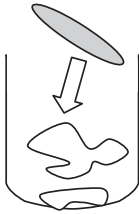

Press down firmly

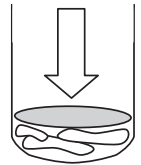

المشكلة	السبب المحتمل
الجهاز لا يعمل	- هل انقطع التيار الكهربائي؟ - هل سلك التيار الكهربائي متصل بمصدر التيار الكهربائي؟ - هل النايض متشابك مع شيء ما
لا يمكن التصريف	- هل تم إنزال خرطوم التصريف؟ - هل خرطوم التصريف متجمد؟ - هل خرطوم التصريف مسدود؟ - هل سقطت أي ملابس خارج حوض التنشيف
صوت غير طبيعي أثناء الغسيل	هل توجد أي أشياء غير مثبتة في حوض الغسيل؟
هل يوجد صوت غير طبيعي و / أو اهتزاز عنيف أثناء الدوران؟	- هل الجهاز موضوع على سطح مستو وصلب؟ - هل تم وضع الغطاء الدوار في حوض التنشيف؟ - هل سقطت أي ملابس خارج حوض التنشيف؟ - هل يوجد الكثير من الغسيل في حوض التنشيف

الصيانة

يرجى فصل سلك التيار الكهربائي قبل القيام بأي أعمال صيانة. سيكون هناك وبر في مرشح التدفق وفلتر الورير بعد كل مرة من الاستخدام وتحتاج هذه الفلاتر إلى التنظيف بشكل متكرر من أجل الحفاظ على أفضل أداء للجهاز.



تعليمات تنظيف الجهاز:

- نظف الجهاز بقطعة قماش ناعمة.
- لا ترش الماء مباشرة على الجهاز.
- إذا كان الجهاز متسخًا جدًا استخدم منظف جيد للتنظيف.
- لا تستخدم المنظفات التي تحتوي على المركبات البترولية لتنظيف الجهاز لأن ذلك سيضر بالمظهر.

تنظيف الفلتر:

- يجب استخدام الفلتر أثناء كل عملية غسيل.
 - يجب تنظيف الفلتر فورًا في كل مرة بعد الاستخدام.
- (1) تفكيك الفلتر:
- إمسك إطار الفلتر كما هو موضح في الصورة واضغط برفق للأسفل واسحب من الإطار.
- (2) تنظيف الفلتر:
- اغسل الفلتر وهو لا يزال مبللاً، اغسله بالماء النظيف فقط.
- بعد الغسيل قم بتجفيفه وتجنب التجفيف تحت أشعة الشمس المباشرة.
- (3) تركيب الفلتر:
- أدخل الجزء السفلي من إطار الفلتر في الفتحة ثم ادفع الفلتر برفق في مكانه.


تعليمات الأمان

في حالة تلف القابس، لا تحاول إصلاحه بدون معرفة كهربائية. اطلب المشورة من خبير أو اتصل بفني مؤهل. 	- لا تشرك أكثر من جهاز في منفذ الطاقة الواحد - لا تستخدم مصدر طاقة غير معتمد، حافظ على نظافة شريط القابس 
أمنع الأطفال من اللعب بالقرب من الجهاز. 	لا تضع يدك في الحوض أبدًا أثناء العمل 
- أبعد الجهاز عن المعدات لمولدة للحرارة - تجنب التعرض لأشعة الشمس المباشرة 	لا تضع الجهاز في الحمام، فقد يؤدي هذا إلى إتلاف العزل الكهربائي ويسبب المدا للهيكال 
لا تضع أشياء ثقيلة أو ساخنة فوق الجهاز 	لا تغسل الملابس المقاومة للماء مثل معطف المطر، فقد يتسبب ذلك في اهتزاز غير طبيعي أثناء الغسيل 
لا تغسل الملابس المبللة بالبنزين والمذيبات العضوية 	ضع الجهاز على سطح صلب ومسطح 

استكشاف الأخطاء وإصلاحها

قبل الاتصال بالفني أو إرسال جهازك للإصلاح، يرجى التحقق من قائمة استكشاف الأخطاء التالية:
- لا تحاول إصلاح الجهاز بنفسك.

(3) أدخل خرطوم إدخال الماء في موصل مدخل الماء.

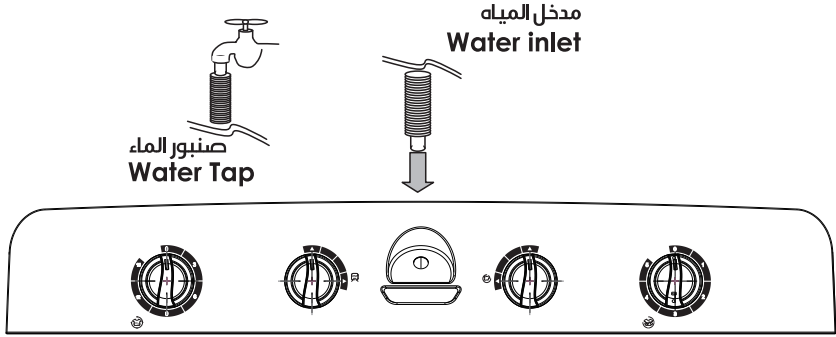

(4) حدد مستوى الماء وفقاً لكمية الغسيل بالرجوع إلى تحديد مستوى الماء.

تنظيف فلتر الوير

* يجب استخدام فلتر الوير أثناء كل مرة غسيل.

* يجب تنظيف فلتر الوير فوراً في كل مرة بعد الاستخدام.

(1) إزالة فلتر الوير:


امسك إطار المرشح كما هو موضح في الصورة ، واضغط برفق لأسفل واسحب من إطار المرشح.

(2) تنظيف الفلتر:


اغسل الفلتر وهو لا يزال رطباً. يغسل بالماء العادي فقط. بعد الغسيل ، جففها. تجنب الجفاف تحت أشعة الشمس المباشرة.

(3) تركيب الفلتر:

أدخل الجزء السفلي من إطار المرشح في الفتحة ، ثم ادفع الفلتر برفق في مكانه.

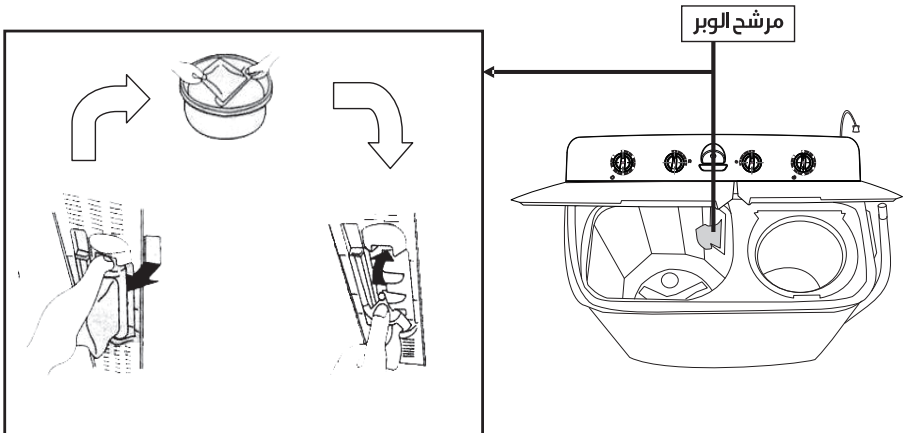

مكونات الجهاز

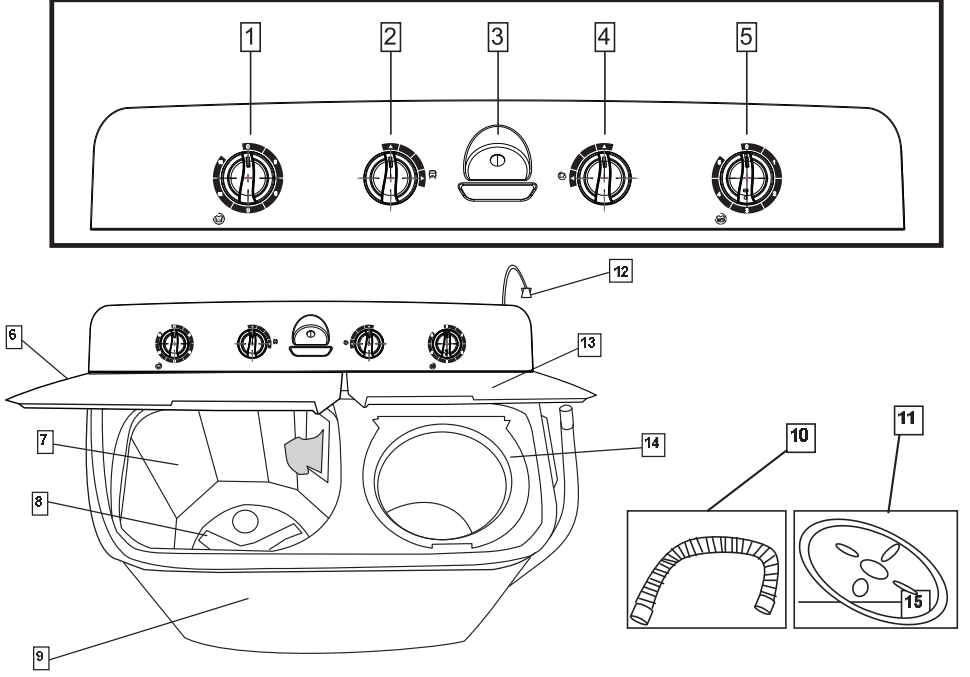

1 مؤقت الغسيل	6 غطاء غسيل	11 غطاء أمن
2 محدد الصرف	7 حوض غسيل	12 سلك كهرباء
3 مدخل مياه	8 التابض	13 غطاء سبين
4 محدد الغسيل	9 الجسم الخارجي	14 غطاء داخلي دوار
5 مؤقت الدوران	10 خرطوم إدخال المياه	15 خرطوم الصرف

التحضير قبل الغسيل

(1) ضع خرطوم الصرف في أنبوب الصرف أو الحوض



(2) قم بتوصيل سلك إمداد الطاقة بالمأخذ الكهربائي ولكن تأكد من التحقق أولاً مما إذا كان الجهد يتوافق مع ملصق تصنيف الجهاز.

قائمة المحتويات


- فضلا اتبع التعليمات الواردة في كتيب المستخدم من أجل تركيب واستخدام المنتج
- فضلا اقرأ مع الفهم كافة التعليمات الواردة في كتيب المستخدم واحتفظ بالكتيب في مكان آمن للرجوع اليه لاحقا
- اذا كان لديك أسئلة حول استخدام المنتج، فضلا تواصل مع خدمة العملاء عبر الإنترنت، حسب اللغة التي تحتاجها

18	مكونات الجهاز
18	التحضير قبل الغسيل
16	تعليمات الأمان
16	استكشاف الأخطاء وإصلاحها
15	الصيانة
14	جراءات الغسيل

شكرا لشرائك هذا المنتج. فضلا اقرأ مع الفهم كافة التعليمات الواردة في كتيب المستخدم واحتفظ بالكتيب للرجوع اليه لاحقا. ان الصور الواردة في هذا الكتيب هي للتوضيح فقط. مواصفات المنتج الحقيقية هي ما تجدها على المنتج نفسه.

تعليمات
وكتيب الضمان

سانفورد
تعيش تفاصيل يومك

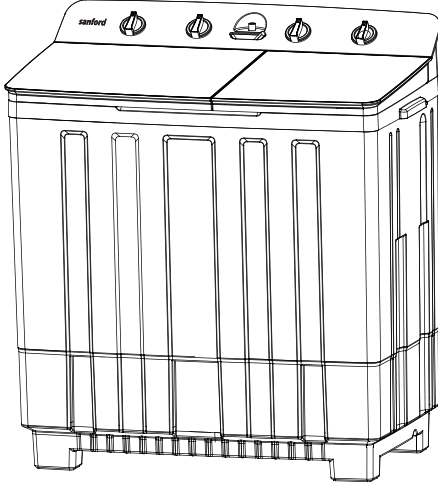

غسالة حوضين

اس اف ٨٢٩ دبليو ام

قم بمسح رمز كيو ار ضونيا ثم قم
بالسجبل خلال ١٤ يوما من تاريخ الشراء
للحصول على الضمان.



قبل البدء في التركيب، اقرأ هذه التعليمات جيدا. ان اتباع هذه التعليمات
سيسهل عملية التركيب بالشكل الامن والصحيح. أترك كتيب التعليمات
بالقرب من المنتج للاطلاع عليها لاحقا.



AR ARABIC



٨٠٠ واط
٢٢٠-٢٤٠ فولت ~ ٦٠/٥٠ هرتز



www.sanfordjapan.com | info@sanfordworld.com

صنع في الصين