


TWIN TUB WASHING MACHINE

SF8303WM

Scanning the QR code gives you access to your product's warranty registration and services.

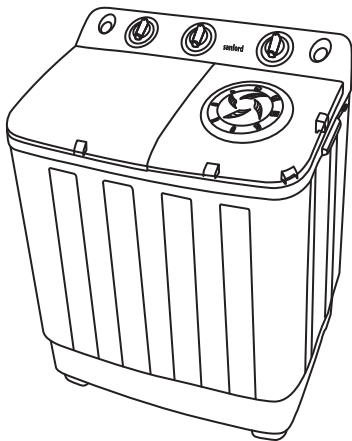

Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

EN ENGLISH



360 Watts
220-240V~ 50-60Hz
Batch No.: 8303032024




TABLE OF CONTENTS

- Please obey the notices in the Instructions Manual to assemble and use the product.
- Please read and understand the Instructions Manual and keep it properly for future reference.
- If you have any question in use, please contact online service in the required language.

Name of parts _____	3
Function and Features _____	3
Warning _____	3
Installation _____	4
Connect the Intake Pipe _____	4
Before Washing _____	5
Washing Operation _____	5
Second Washing _____	6
Notice When Draining _____	7
After Washing _____	7
Clean the Lint Filter _____	7
Notice _____	8

Thank you for buying this product. Please read and understand this manual carefully and keep it properly for convenience. The pictures in this instruction manual are for reference only, specifications are subject to the physical product.

NAME OF PARTS

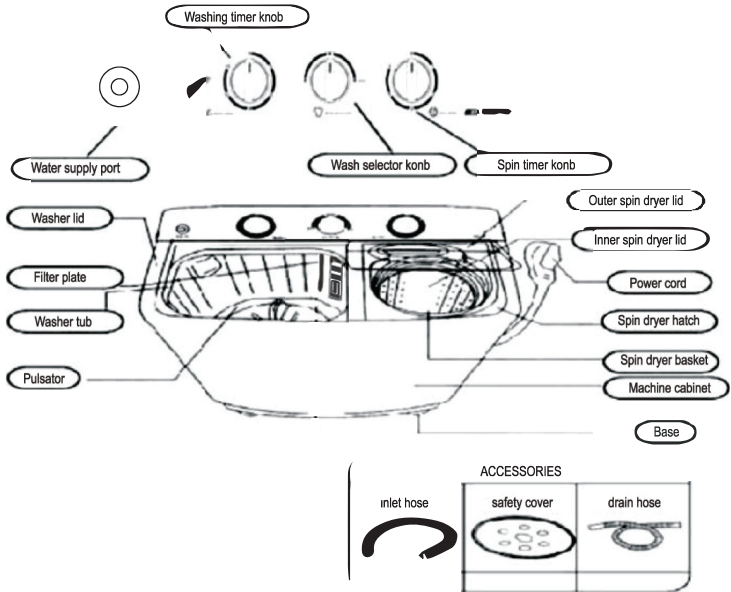

FUNCTION AND FEATURE

WITH PERFECT DESIGN AND PP SHELL, THE SEMI-AUTOMATIC WASHING MACHINE IS NEVER RUSTY WHEN WASHING.

DOUBLE-FLOW WATER LEVEL AND THE HANDWHEEL DESIGN MAKE IT EASIER TO CLEAN OFF THE GREASE AND DIRT ON THE CLOTHES. WASHING WITH DOUBLE-FLOW WATER LEVEL, IT HELPS GET THE CLOTHING OUT OF TWINING OR TWISTING AND CLEAN WITH LITTLE WEARING

DISSOLVES WASHING POWDER QUICKLY AND FEATURES MORE EFFICIENT CLEANING THAN THE COMMON DOUBLE-TUBE WASHING MACHINE

STRONG FUNCTIONS AND LOW NOISE. HANDWHEEL NEVER FRAYS.

WARNING

- ★ Please pull out the plug after washing.
- ★ Measure the distance between the drain pipe and the drain spigot before installation.
The length of the drain pipe is 130 cm (51 ft).
- ★ Do not press the drain hose into the sewer.
- ★ If the inlet hose has air intake, the entrance of it should not be blocked.
- ★ This machine is not intended for use by children unless someone who understands how to operate it supervises or instructs the use of the appliance.
- ★ If the power cord is damaged, it must be replaced by the manufacturer.
- ★ Children are not allowed to play with this appliance.
- ★ Children under 3 should be kept away from the machine.

Installation


Install it in places with firm and smooth ground

- ★ The washing machine should be installed on a firm and level ground, allowing 2 cm (1 inch) slopes.
- ★ The washing machine should be 5 cm (2 inch) away from the wall.



Connect the intake pipe


- ★ Position the intake pipe correctly.
- ★ Insert the affusion spigot into the affusion hole.

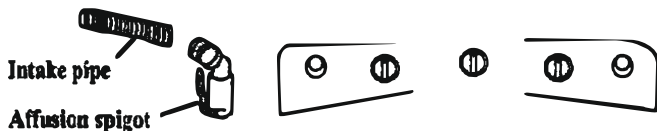


Before Washing

 1. Take out coins, nails or other things on the clothes.	 2. Do not put clothes containing chemical reagents into the washing machine
 3. Turn out the fabric inside when washing clothes.	 4. Put easy-to-fraying clothes in the laundry bag when washing.

Washing Operation

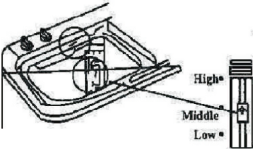 Connect the intake pipe with the water spigot	 Insert the plug
 Put down the drain pipe	 Put the clothes and then the washing powder into the washing machine
 ★Choose high, medium, and low water levels according to the number of clothing. ★Middle or high setting is the most suitable for double-flow water level.	

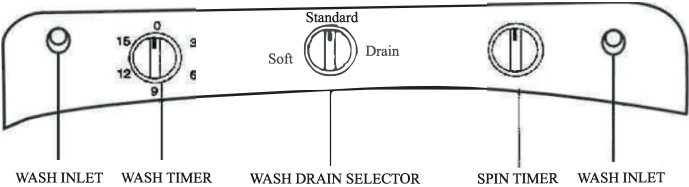

- Choose the washing mode. 

Turn on the switch and choose “soft or standard” mode according to the quantity of the clothes. Then the washing machine starts to work.

- Choose the washing time. 

When the water reaches the water level, choose the washing time from 3 to 15 minutes.

Choose the Washing Mode	Soft	Standard
Clothing Type	Silk or floss clothes	Linen or dirty clothes
Washing Time	3-5 min	5-9 min or 9-15 min
Water Level	Quantities of Washing Powder	
High	40-57g	
Middle	30-48g	
Low	25-40g	
• Drain When finishing washing, turn the switch to drain position. • Choose drain time ★ After washing, put the wet clothes into the drying tub and then cover the lid ★ Turn the spin timer in sequence and the machine begins to work		

Second Washing

Perform the washing procedure twice. Wash and drain twice.

After finishing first draining, begin to the second washing and draining to save energy.

Second Washing While Affusion

Flush twice, open the water valve, and pour water into the flushing pipe.

Notice When Draining


- ★ Cover the plastic lid when the machine is drying.
- ★ Do not dry when draining, put the clothes into the drying tub after draining, so as not to damage the machine.
- ★ Cover the lid tightly when spinning to avoid clothes flying out of the tub.
- ★ Never put hands into the drying tub while working, and especially keep children away from the machine.

After Washing

Pull out the plug, turn off the water tap and then hang up the drain pipe. Clean the drying machine and open its plastic cover to keep it dry.

Clean The Lint Filter

Please clean the lint filter after washing every time.

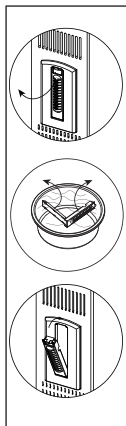

★ Take down the lint filter

★ Clean the lint filter with water

★ Put the bottom into the hole and then press it

Notice



Do not install the washing machine in places with sloping floor or ground.



Do not pour water on the switch.



When using warm water, the temperature deviation should not exceed 50°C (122°F)



Do not use gasoline, alcohol and other organic solvents to wash the machine.

WARRANTY INSTRUCTIONS

Thank you for purchasing **SANFORD** products, for the sake of the excellent quality of our products, we certify that **SANFORD** products are free of defects in material and workmanship and the end-user is entitled to this warranty subject to the terms and conditions listed below.

(1) The warranty will be effective only if you receive a Confirmation/Approval email and a warranty certificate from **SANFORD**.

(2) No other express warranty either written or oral is applicable to any product. THE DURATION OF ANY IMPLIED WARRANTIES INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY OF HEREIN. **SANFORD** SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS, OR ANY OTHER DAMAGES, DIRECT, OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS APPLICABLE TO THIS PRODUCT.

(3) The warranty covers product failure only. If any product is found defective, **SANFORD** will at its option, repair the product in question. Any replaced parts will become the company's property.

(4) The warranty does not apply to/ if (a) the accessories provided with the product. (b) cosmetic damage (c) damage due to improper use or maintenance (d) repair or attempted repair of the product by non-authorized persons (e) damage from accidents, lightning, water, fire, improper ventilation, misuse, alteration, or any cause beyond the control of **SANFORD**. (f) the type of the product is defaced, removed, altered, deleted, or rendered illegible.

(5) **SANFORD** will not be liable for any loss directly or indirectly caused by the breakdown of the equipment, also for any delay in repairing the set due to the non-availability of components.

(6) The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

(7) The warranty terms and conditions of this warranty certificate would be revised without prior notice.

(8) **SANFORD** and its authorized service centers will make every effort to carry out expeditious repairs under this warranty as soon as possible.



LIMITED WARRANTY

Warranty Period	2 Years
-----------------	---------

SANFORD hereby warrants, subject to the terms and conditions herein below set forth that should this product become defective by reason of improper workmanship or material during the below specified warranty period, **SANFORD** will repair the same, effecting all necessary parts replacement, without charge for either parts or labour.

REGISTER YOUR NEW SANFORD PRODUCT FOR WARRANTY

Scanning the QR code gives you access to your product's warranty registration and services.



STEP: 1

Register the warranty by scanning the QR code or log on to <http://www.sanfordjapan.com/warranty.html> to access the warranty registration form.

STEP: 2

Fill out the Warranty Registration Form and submit the application after reading and agreeing to the terms and conditions.

STEP: 3

After successful registration, the page will display the notification message "Your entry has been submitted successfully!"

STEP: 4

Our customer service department will verify the warranty registration within 7 days. If your warranty registration is approved, you will receive a Warranty Certificate email. Please keep the certificate to claim the warranty.

If your warranty registration is denied, you will receive an email from us explaining the reason for the rejection.

For more information, Call Toll-Free 800-7263673 (UAE)

Toll-Free 1800-4251163 (INDIA), +966 559039111 (KSA)

+968 9525 8453 (OMAN), +974 3343 7806 (QATAR)

Moreover you may write to sm-dwc@sanford-me.com and service@sanford-me.com or WhatsApp +971 543498627

ضمان محدد

تضمن **سانفورد**، وفقاً للشروط والادكام الموضحة بأنه في حال تعطل هذا المنتج بسبب سوء التصنيع أو المواد المستخدمة حسب الفترة الموضحة ادناه، فإن **سانفورد** ستقوم بصيانة ذات المنتج، بما في ذلك كافة الاجزاء التي تأثرت من جراء هذا العطل دون أي رسوم مقابل الاجزاء أو العمل.

قم بتسجيل منتج سانفورد الجديد خاصتك للحصول على الضمان

يمكنك مسح رمز الاستجابة السريعة إمكانية الوصول إلى تسجيل الضمان الخاص بمنتجك وخدمات الصيانة.

الخطوة ١

تسجيل المنتج عبر مسح رمز الـ كيو آر ضوئياً أو الدخول على الرابط
<http://www.sanfordjapan.com/warranty.html>
من أجل الحصول على استمارة التسجيل



الخطوة ٢

املأ استمارة التسجيل وقم بتقديمه بعد الاطلاع والموافقة على كافة الشروط والادكام.

الخطوة ٣

بعد اتمام عملية التسجيل بنجاح، ستظهر لك هذا الرسالة: "لقد تم التقديم بنجاح".

الخطوة ٤

سيقوم قسم خدمة العملاء بمراجعة تسجيلك خلال ٧ ايام، في حال الموافقة على التسجيل الذي قمت به، ستملك رسالة تحتوي على شهادة الضمان في بريدك الالكتروني. فضلاً احتفظ بهذه الشهادة للحصول على الضمان. في حال قبول تسجيلك بالرفض، ستملك رسالة لتوضيح اسباب الرفض.

للمزيد من المعلومات، يرجى الاتصال بالرقم المجاني 800 7263673 (الامارات العربية المتحدة)

الرقم المجاني 18004251163 (الهند)، +966 559039111 (المملكة العربية السعودية)

+968 84539525 (عمان)، +974 78063343 (قطر)

كما بإمكانك ان ترسلنا على البريد الإلكتروني: sm-dwc@sanford-me.com وكذلك: service@sanford-me.com

أو على رقم الواتساب: +971 543498627

تعليمات التشغيل

شكرا لشرائك منتجات سانفورد. من أجل ضمان الجودة لمنتجاتنا، نشهد بأن منتجات سانفورد خالية من العيوب في مواد التصنيع والعمل وأن المشتري له الحق في الحصول على هذا الضمان وفقا للشروط التالية:

1. يكون الضمان ساريا فقط في حال تلقيك لرسالة تأكيد/موافقة من شركة سانفورد عبر البريد الالكتروني.
2. لا يوجد ضمان صريح آخر سواء كتابي أو شفوي ينطبق على أي منتج. تقتصر مدة أي ضمانات بما في ذلك الضمان الضمني لقابلية التسويق على مدة الضمان الصريح الوارد في هذه الوثيقة. لا تنتم شركة سانفورد مسؤولية فقدان استخدام المنتج أو الإضرار أو الخسارة أو أي أضرار أخرى ، مباشرة أو تكملية ، ناشئة عن استخدام أو عدم القدرة على استخدام هذا المنتج أو عن أي خرق أو انتهاك صريح أو ضمني للضمان، بما في ذلك الضمان الضمني للتسويق، ينطبق على هذا المنتج.
3. يغطي هذا الضمان فشل المنتج في العمل فقط. في حال اكتشاف ان الجهاز يحتوي على عطل ما، ستقوم سانفورد، تطوعا، بصيانة المنتج المذكور. اي اجزاء تم استبدالها تصبح ملكية خاصة بالشركة.
4. لا ينطبق هذا الضمان على أ. الملاحظات التي تأتي مع المنتج ب. اعطال كهربائية. ت. عطل بسبب سوء الاستخدام أو الصيانة. ث. صيانة أو محاولة صيانة المنتج بواسطة شخص لا يملك الصلاحية. ج. عطل بسبب الحوادث أو البرق أو الماء أو الحريق أو سوء التهوية أو سوء الاستخدام أو التعديل أو لأي سبب خارج ارادة سانفورد.
5. لا تتحمل سانفورد مسؤولية الفقدان بسبب تعطل الجهاز بشكل مباشر أو غير مباشر. كذلك، لأي تأخير في صيانة المنتج بسبب عدم توفر قطع الغيار.
6. يجب ارفاق فاتورة الشراء التي تحتوي على تاريخ شراء المنتج كدليل على صحة التاريخ لبدء صلاحية الضمان.
7. ان شروط واحكام هذا الضمان قابلة للتغيير دون سابق اخطار.
8. ستقوم سانفورد وكافة مراكز الصيانة المعتمدة لديها بكل ما في استطاعتها لصيانة المنتج بالصورة الكاملة تحت هذا الضمان في اسرع وقت ممكن.

ملاحظة

لا تقم بتركيب الغسالة في أماكن ذات أرضية مائلة



لا تسكب الماء على مفتاح التشغيل



عند استخدام الماء الدافئ، يجب ألا تتجاوز درجة الحرارة 50 درجة مئوية (122 فهرنهايت)



لا تستخدم البنزين والكحول والمذيبات العضوية الأخرى لغسل الجهاز



الغسل للمرة الثانية أثناء النقع

اغسل مرتين، وافتح صمام الماء، ثم اسكب الماء في أنبوب الشطف


بعد الغسيل

اسحب القابس، وأغلق صنوبر المياه، ثم قم بتعليق أنبوب التمرير، ونظف ماكينة التجفيف، وافتح غطاءها البلاستيكي لإبقائها جافة.


تنظيف الفلتر

يرجى تنظيف الفلتر بعد الغسيل في كل مرة


قم بإزالة الفلتر

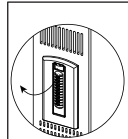

قم بتنظيف الفلتر بالماء



ضع الجزء السفلي في مكانه المخصص ثم اضغط عليه

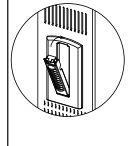



● اختيار وضع الغسيل

قم بتشغيل المفتاح واختر الوضع "الناعم أو القياسي" وفقاً لكمية الملابس.
ثم ستبدأ الغسالة في العمل



اختيار وقت الغسيل

عندما يصل الماء إلى مستوى الماء، قم باختيار وقت الغسيل من 3 إلى 15 دقيقة

اختيار وضع الغسيل	ناعم	قياسي
نوع الملابس	الملابس الحريرية أو الخفيفة	البياضات أو الملابس المتسخة
وقت الغسيل	3-5 دقائق	5-9 دقائق أو 9-15 دقيقة
مستوى الماء	كمية مسحوق الغسيل	
مرتفع	40-57 غرام	
متوسط	30-48 غرام	
منخفض	25-40 غرام	
التصريف عند الانتهاء من الغسيل، أدر المفتاح إلى وضع التصريف اختيار وقت التصريف • بعد الغسيل، ضع الملابس المبللة في حوض التجفيف ثم قم بتغطية الغطاء • قم بتشغيل مؤقت الدوران بالتسلسل وستبدأ الغسالة في العمل		

الغسلة الثانية



قم بإجراء عملية الغسيل مرتين، ثم اغسلها وجففها مرتين
بعد الانتهاء من عملية التصريف الأولى، ابدأ في عملية الغسيل والتصريف الثانية لتوفير الطاقة

قبل الغسيل

2. لا تضع الملابس التي تحتوي على مواد كيميائية في الغسالة		1. أخرج العملات المعدنية أو المسامير أو الأشياء الأخرى الموجودة في الملابس	
4. ضع الملابس سهلة الاهتراء في كيس الغسيل عند الغسيل		3. أقلب القماش من الداخل عند غسل الملابس	

طريقة الغسيل

أدخل القابس		قم بتوصيل أنبوب التزويد بصنبور الماء	
ضع الملابس ثم مسحوق الغسيل في الغسالة		ضع أنبوب التصريف بالانسفل	
اختر مستويات المياه العالية والمتوسطة والمنخفضة وفقاً لعدد الملابس الإعداد المتوسط أو العالي هو الأنسب لمستوى المياه مزدوج التدفق			

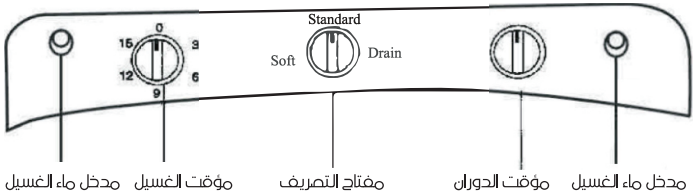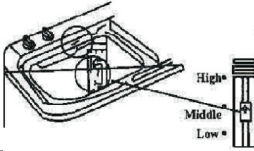

مدخل ماء الغسيل مؤقت الغسيل مفتاح التصريف مؤقت الدوران مدخل ماء الغسيل

تحذير

- يرجى سحب القياس بعد الغسيل
- قم بقياس المسافة بين أنبوب الصرف وصنبور الصرف قبل التثبيت. طول أنبوب الصرف 130 سم (51 قدم)
- لا تضغط على خرطوم الصرف داخل المجاري
- إذا كان الخرطوم يحتوي على مدخل للهواء، فلا ينبغي أن يكون مدخله مسدودًا
- هذا الجهاز غير مخصص للاستخدام من قبل الأطفال إلا إذا كان هناك شخص يفهم كيفية تشغيله ويشرف على استخدام الجهاز
- في حالة تلف سلك الطاقة، يجب استبداله من قبل الشركة المصنعة
- لا يسمح للأطفال باللعب بهذا الجهاز
- يجب إبعاد الأطفال الأقل من 3 سنوات بالعمر عن الجهاز

التركيب

قم بتركيبه في الأماكن ذات الأرضية الصلبة والناعمة

- يجب تركيب الغسالة على أرض ثابتة ومستوية، مع السماح بانحدار بمقدار 2 سم (1 بوصة)
- يجب أن تكون الغسالة بعيدة مسافة 5 سم (2 بوصة) عن الحائط




توصيل أنبوب تزويد الماء

- ضع أنبوب التزويد بشكل صحيح
- أدخل حنفية التزويد في فتحة التزويد



الأجزاء الرئيسية

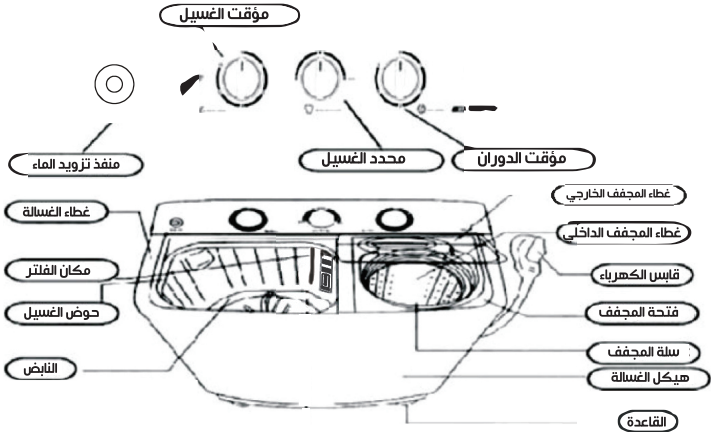

الملاحظات		
خرطوم تزويد الماء	غطاء للحماية	خرطوم التصريف

الوظائف والمميزات

- مع التصميم المثالي وغطاء PP، فإن الآلة نصف الأوتوماتيكية لا تمداً أبداً عند الغسيل.
- مستوى مياه مزدوج التدفق وتصميم العجلة اليدوية يجعل من السهل تنظيف الملابس من الشحوم والأوساخ، والغسيل بمستوى مياه مزدوج التدفق، يساعد على تحرير الملابس من التشابك أو الالتواء والتنظيف مع القليل من التآكل.
- يذيب مسحوق الغسيل بسرعة ويتميز بتنظيف أكثر كفاءة من الغسالة العادية ذات الأنابيب المزدوج.
- وظائف قوية وضجيج منخفض، عجلة يدوية لا تتآكل أبداً.

قائمة المحتويات

- فضلا اتبع التعليمات الواردة في كتيب المستخدم من أجل تركيب واستخدام المنتج
- فضلا اقرأ مع الفهم كافة التعليمات الواردة في كتيب المستخدم واحتفظ بالكتيب في مكان امن للرجوع اليه لاحقا
- اذا كان لديك أسئلة حول استخدام المنتج، فضلا تواصل مع خدمة العملاء عبر الإنترنت، حسب اللغة التي تحتاجها

الاجزاء الرئيسية	٣
الوظائف والمميزات	٣
تحذير	٤
التركيب	٤
قبل الغسيل	٥
طريقة الغسيل	٥
الغسلة الثانية	٦
الغسل للمرة الثانية أثناء النقع	٧
بعد الغسيل	٧
تنظيف الفلتر	٧
ملاحظة	٨

شكرا لشرائك هذا المنتج. فضلا اقرأ مع الفهم كافة التعليمات الواردة في كتيب المستخدم واحتفظ بالكتيب للرجوع اليه لاحقا. ان الصور الواردة في هذا الكتيب هي للتوضيح فقط. مواصفات المنتج الحقيقية هي ما تجدها على المنتج نفسه.


تعليمات
وكتيب الضمان

سانفورد
تعيش تفاصيل يومك

غسالة حوضين

اس اف ٨٣٠٣ دبليو ام

يمكنك مسح رمز الاستجابة السريعة
امكانية الوصول إلى تسجيل الضمان الخاص
بمنتجك وخدمات الصيانة.

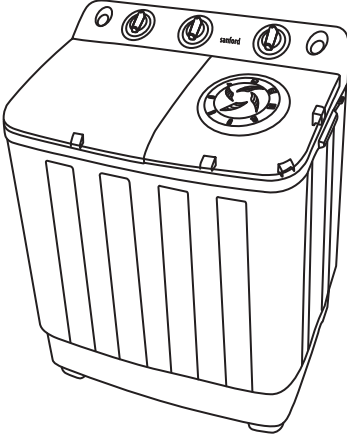

قبل البدء في التركيب، اقرأ هذه التعليمات جيدا. ان اتباع هذه التعليمات
سيسهل عملية التركيب بالشكل الامن والصحيح. أترك كتيب التعليمات
بالقرب من المنتج للاطلاع عليها لاحقا.



AR ARABIC



٣٦ واط
٢٢٠-٢٤٠ فولت ~ ٦٠/٥٠ هرتز

