



INSTRUCTION MANUAL / WARRANTY CARD

SF1413WD
WATER DISPENSER

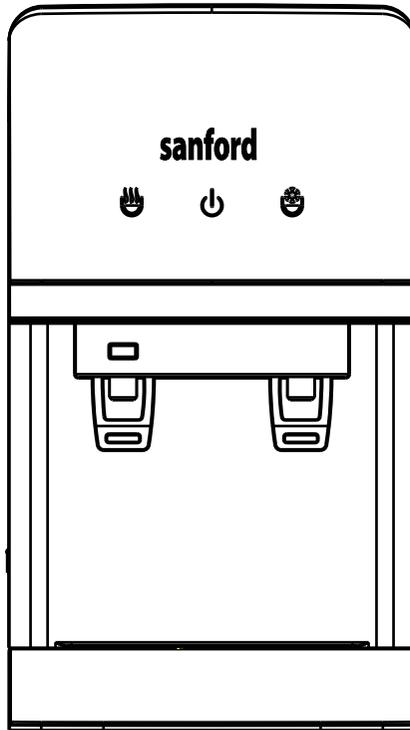


sanford®

TOUCHING YOUR LIFE EVERYDAY

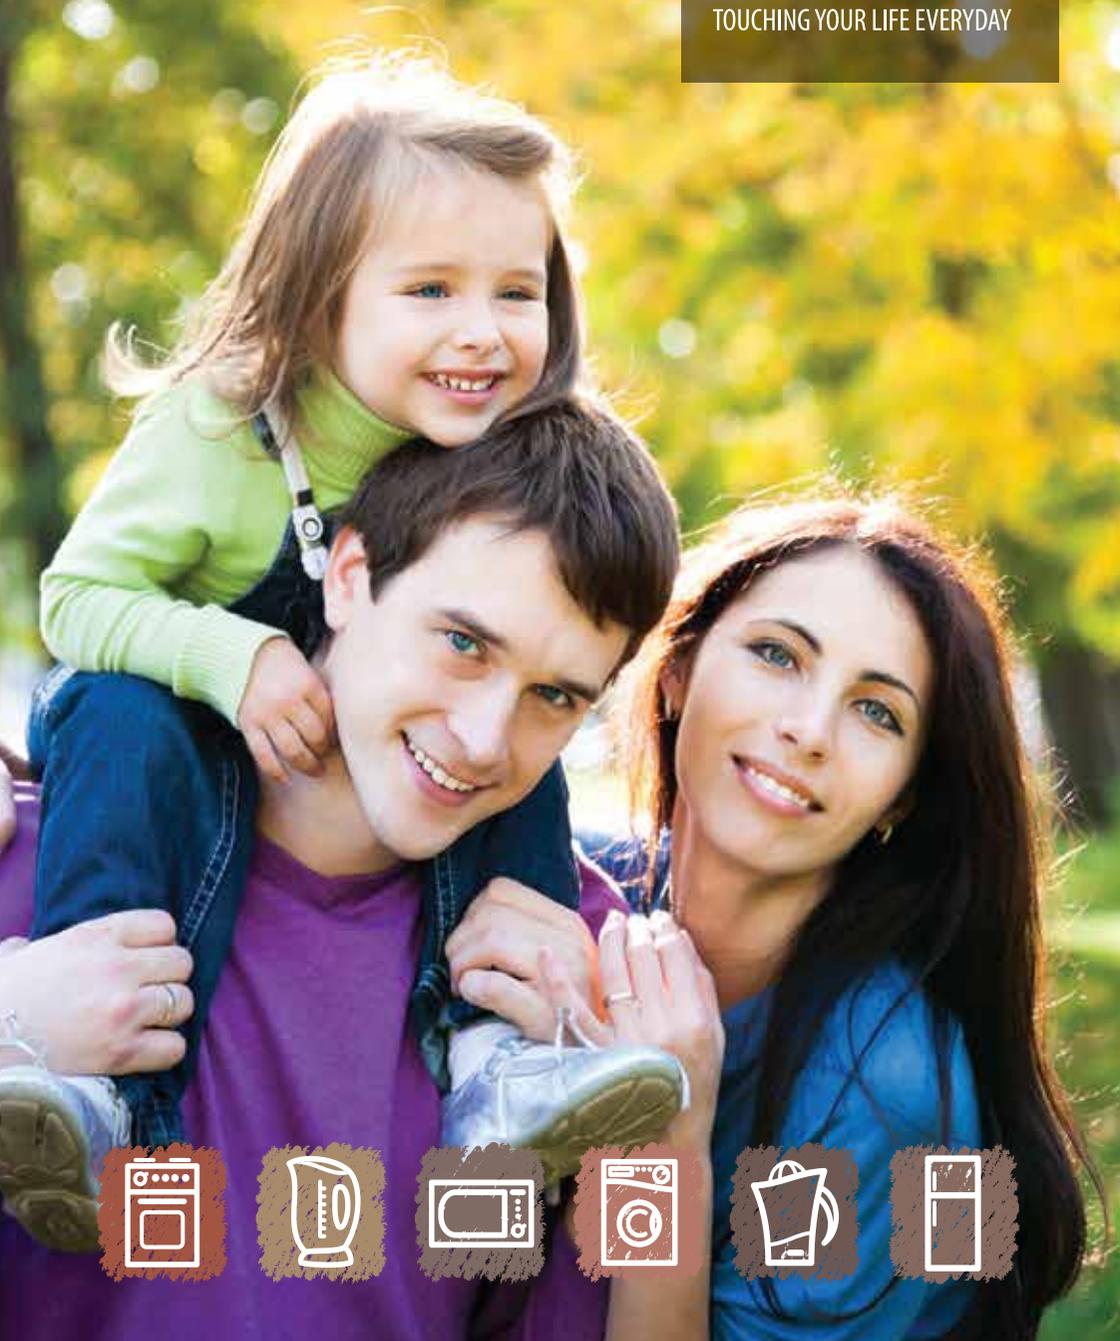

PART NAME

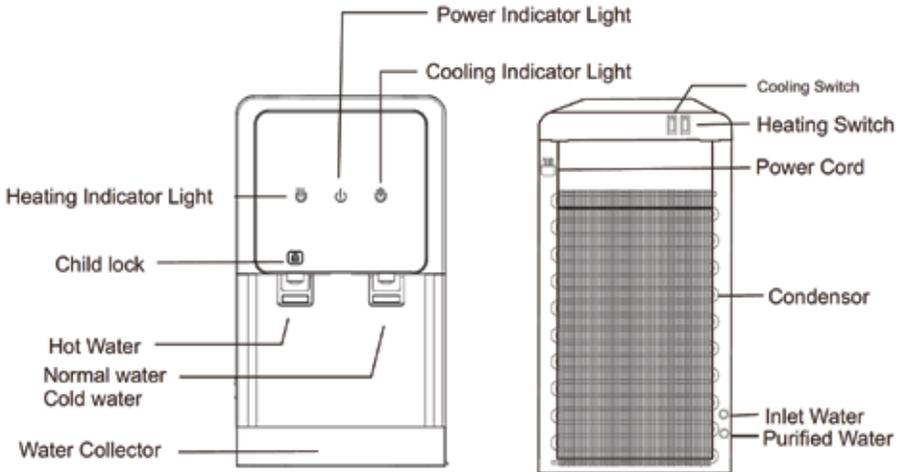

NOTES:

This machine is suitable for bottles of 3 or 5 gallons. Don't use unhealthy hard water.

This machine should work under an environment of temperature from 10°C-38°C, relative humidity not higher than 90%.

Ice Block: please clear the ice block first!


If this machine worked under an environment of temperature below 0°C or the thermostat did not work, the water will become ice in the cold water tank and block the pipe.

FUNCTION INTRODUCTION

1. This model dispenser can satisfy the need of making tea & coffee and making cold drinks. It's suitable for use at home and in public.
2. With adoption of distinctive thermal isolation technology, this machine can minimize thermal exchange between hot & cold water.

OPERATION INSTRUCTION

1. Leave it for 1 hour to stabilize the refrigerant when first time using this water dispenser
2. Insert the pipe to the gallon and then plug the cover to mouth of gallon.
3. Center the electrical cord to the outlet, and turn on the red switch (heater) located behind the unit.
Ensure that the socket/electric source has a grounding to prevent electric leakage. And turn on the switch located behind the unit.
4. For the first time to use, the inside of the unit must be cleaned. Press the hot water and cold water. Make sure the water out of the tap both. After both the tap water out, wait around 20 minutes, then remove gallons of storage and empty of the water in the unit by opening the drain cover. Make sure the power cord is unplugged from the power source when the discard excess water.
5. If you want to drink boiled water, please press "heating" switch. If you want to drink cold water, please press "cooling" switch






WARNING

1. The plug base should be three-hole grounded with electricity leakage protection.
2. The children is not allowed to play with water faucet to avoid accidental burns.
3. This device is not intended for use by people suffering from a lack of physical ability, sensory or mental (including children), or from lack experience and knowledge, if did not have control or instructions use the device through a people will be responsible for Safety.







CAUTION

1. Keep this machine in a dry and cool place and avoiding direct sunshine. Rearward of the machine should be at least 20 cm far from the wall. Never put the machine on the paper or foam, which may cause unstable condition, such as store water or cause creepage. Never put anything flammable beside this machine.
2. To avoid damage to the machine, don't plug the power cord or turn on the heating switch (red) until 3 minutes after you putting the filled water bottle.
3. In case hot (or cold) water is not needed for a long time, turn off the switch For saving power.
4. This water dispenser must be used with third-prong grounding plug and creepage protection switch. If use two

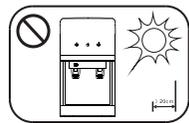

flat plug, the grounding wire must be properly grounded before use.

5. In case not to use this machine for a long time, turn off the switch, then pull the plug out from socket and drain the remaining water through drain hole.
6. Never use organic liquid to clean the machine. Strictly prohibit splashing water to the body.
7. You should use the ON/Off switch to turn on or off the machine. It is prohibited that turn on or off the machine through plugging or unplugging the power cord. Never extend the length of the power supply cord to avoid fire.
8. **For this model dispenser (with compressor), never turn the machine upside down or lean it more than 45° .**
9. Since this model dispenser thermostat has been adjusted. Please do not adjust it by yourself.
10. This machine should not be turned on until 3 minutes later when turning off the cooling switch (blue button).
11. The power cord or other parts must be replaced by professional person when it is damaged.
12. The cooling time will be little longer when the environment temperature is higher than normal.




CLEANING

To avoid accident, cut off the power supply before operation according to the following instruction.

1. The machine had been disinfected before shipping from factory. Before using this machine, clean the machine by push the hot water tap and cold water tap, let about 1 liter water flow out.
2. The machine should be disinfected with the disinfectant available from drugstore or market place according to the instruction manual of the disinfectant, and then clean it with water.
3. Have the bottle supporter, water tank & heating element cleaned by expert about every year. It will keep the machine in good condition and extend its life. Never disassemble this machine by yourself to avoid damaging the machine.
4. Draining instruction: open the taps, and take away the cap & rubber stopper from the water outlet on the rear side of machine.
5. Use any neutral & none friction cloth to wash the surface of the machine.

CIRCUIT

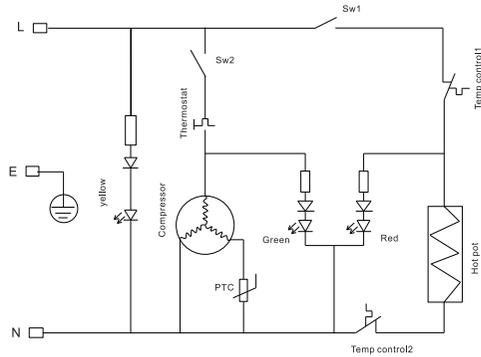

Note: all the data is subject to change without notice.

TECH.DATA:

MODEL	SUPPLY	WATT		FLOW CAPACITY		SPECIFICATION	N.W./G.W. (kg)	PACKING (LxWxH)mm
		HOT	COLD	HOT	COLD			
SF1413WD	220-240V~ 50/60Hz	420W	100W	5.0L/h ≥90°C	2L/h ≤10°C	Compressor cooling	9.4 / 10.8kg	330 x 300 x 560

TROUBLE SHOOTING

Please check the following before have the machine repaired.


PROBLEMS	POSSIBLE CAUSES	ELIMINATION
No hot or cold water	<ol style="list-style-type: none"> Over consumption of hot or cold water in short time. No power supply. 	<ol style="list-style-type: none"> Just wait a moment, then hot or cold water is available again. Connect plug to socket, turn on heating or cooling switch.
No water running out from taps	<ol style="list-style-type: none"> Empty bottle. Inlet of bottle supporter blocked by bottle seal. 	<ol style="list-style-type: none"> Replace it with another bottle. Clean out wasted paper & bottle seal install bottle again.
Leakage from bottle supporter	Broken bottle	Replace it with a new bottle.
Noisy operation	Not placid installation	Place the machine on placid & solidsurface.

الموديل	المورد	وات		سعة التدفّق		المخصّصات	N.W./G.W. (كجم)	التغليّف (الطول - العرض - الارتفاع) ملم
		ساخن	بارد	HOT	COLD			
SF1413WD	220-240V فولت 50/60 هرتز	420 وات	100 وات	5 لتر / ساعة 90 درجة	2 لتر / ساعة 10 درجة	الكمبريسر المبرد	9,4 / 10,8	330 x 300 x 560

استكشاف الأخطاء وإصلاحها

يرجى التحقق مما يلي قبل إصلاح الجهاز

المشاكل	الأسباب المحتملة	الحل
لا يوجد ماء ساخن أو بارد	1. الاستهلاك بشكل كبير من الماء الساخن أو البارد في وقت قصير 2. لا يوجد كهرباء	1. انتظر للحظة فقط، ثم سيتوفر الماء الساخن أو البارد مرة أخرى 2. قم بتوصيل القابس بالمقبس، قم بتشغيل مفتاح التسخين أو التبريد
لا توجد مياه تخرج من الصنابير	1. قارورة فارغة 2. مدخل مكان وضع القارورة مسدود بغطاء القارورة	1. استبدلها بقارورة أخرى 2. قم بإزالة الورق المتراكم حول غطاء القارورة ثم قم بتثبيتها مرة أخرى
تسرب من مكان وضع قارورة الماء	القارورة مكسورة	قم بإزالة الورق المتراكم حول غطاء القارورة ثم قم بتثبيتها مرة أخرى
صوت مزعج أثناء التشغيل	الجهاز بوضع غير مستقر	ضع الجهاز على سطح صلب ومستوي

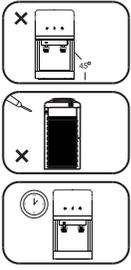


9. حيث أن منظم الحرارة تم تعديله في هذا النموذج، فيرجى عدم ضبطه بنفسك
10. لا ينبغي تشغيل هذا الجهاز إلا بعد 3 دقائق من إيقاف تشغيل مفتاح التبريد (المفتاح الأزرق)
11. يجب استبدال سلك الطاقة أو الأجزاء الأخرى بواسطة شخص محترف عند تلفها
12. سيكون وقت التبريد أطول قليلا عندما تكون درجة حرارة البيئة الخارجية أعلى من المعتاد

التنظيف


لتجنب الحوادث، قم بفصل التيار الكهربائي قبل التشغيل وفقا للإرشادات التالية:

1. تم تعقيم الجهاز قبل الشحن من المصنع، قبل استخدام الجهاز، قم بتنظيف الجهاز عن طريق دفع صنوبر الماء الساخن وصنوبر الماء البارد، اترك حوالي لتر واحد من الماء يتدفق خارجا.
2. يجب تعقيم الجهاز بالمطهر المتوفر من الصيدلية أو السوق وفقا لدليل التعليمات الخاص بالمطهر، ثم نظف بالماء.
3. قم بتنظيف مكان وضع القارورة وخران المياه وعنصر التسخين بواسطة شخص مختص كل عام تقريبا، وسيفي ذلك الجهاز في حالة جيدة ويطيل عمره، ولا تفك هذا الجهاز بنفسك أبدا لتجنب إتلاف الجهاز
4. تعليمات التصريف: افتح الصابن، وانزع الغطاء والسداد المطاطية من مخرج المياه على الجانب الخلفي من الماكينة
5. استخدم أي قطعة قماش طبيعية وغير قابلة للاحتكاك لغسل سطح الجهاز

الدائرة الكهربائية

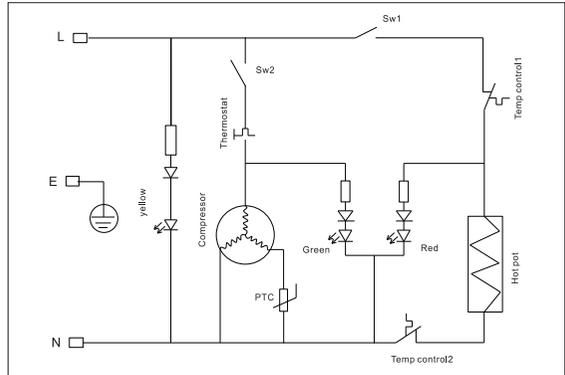

ملاحظة: جميع البيانات عرضة للتغيير دون إشعار

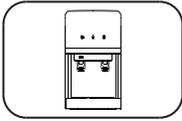

تعليمات التشغيل





1. عند استخدام موزع المياه هذا لأول مرة اتركه لمدة ساعة واحدة ليستقر المبرد.
2. أدخل الانبوب في الجالون ثم قم بتوصيل الغطاء بفوهة الجالون.
3. قم بتوسيط السلك في مصدر الكهرباء، وقم بتشغيل المفتاح الأحمر (التسخين) الموجود خلف الجهاز. تأكد من أن المقبس / المصدر الكهربائي مؤرض لمنع التسرب الكهربائي. وقم بتشغيل المفتاح الموجود خلف الجهاز.
4. عند أول استخدام، يجب تنظيف الجزء الداخلي من الجهاز. اضغط على صنوبر الماء الساخن والماء البارد. وتأكد من خروج الماء من الصنبور. بعد خروج كل من مياه الصنبور، انتظر حوالي 20 دقيقة، ثم قم بإزالة الجالون وفرغ الماء من الجهاز عن طريق فتح غطاء التصريف. وتأكد من فصل سلك الكهرباء عن مصدر الطاقة عند التخلص من المياه الزائدة.
5. إذا كنت ترغب في شرب الماء المغلي، يرجى الضغط على مفتاح "التسخين". إذا كنت تريد أن تشرب ماء بارد يرجى الضغط على مفتاح "التبريد"

تحذير

1. يجب أن تكون قاعدة التوصيل مؤرصة بثلاثة فتحات مع حماية من تسرب الكهرباء.
2. لا يسمح للأطفال باللعب بصنبور الماء لتجنب الحروق المحتملة.
3. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص الذين يعانون من نقص في القدرة الجسدية أو الحسية أو العقلية (بما في ذلك الأطفال) أو من نقص الخبرة والمعرفة، إذا لم يكن لديهم تحكم أو تعليمات لاستخدام الجهاز من خلال شخص يكون مسؤولاً عن سلامتهم.

تحذير


1. احتفظ بهذا الجهاز في مكان جاف وبارد وتجنب أشعة الشمس المباشرة، يجب أن يكون الجزء الخلفي من الجهاز على بعد 20 سم على الأقل من الحائط، ولا تضع الجهاز على الأوراق مطلقاً، مما قد يتسبب في حالة غير مستقرة ويؤدي إلى تسرب المياه أو تحرك الجهاز، ولا تضع أبداً أي شيء قابل للاشتعال بجانب الجهاز.
2. لتجنب تلف الجهاز، لا تقم بتوصيل سلك الطاقة أو تشغيل مفتاح التسخين (الأحمر) إلا بعد 3 دقائق من وضع قارورة الماء المملوءة.
3. في حالة عدم الحاجة إلى الماء الساخن (أو البارد) لفترة طويلة، قم بإيقاف تشغيل المفتاح لتوفير الطاقة.
4. يجب استخدام موزع المياه هذا مع قابس مؤرض ذو ثلاثة أسلاك ومفتاح حماية، وفي حالة استخدام قابس بسلكين فقط، فيجب تثبيت السلك الثالث (المؤرض) بشكل صحيح قبل الاستخدام.
5. في حالة عدم استخدام هذا الجهاز لفترة طويلة، قم بإيقاف تشغيل المفتاح، واسحب القابس من المقبس وصرف المياه المتبقية من خلال فتحة التصريف.
6. لا تستخدم أبداً سائلاً عضوياً لتنظيف الجهاز، ولا ترش الماء على الهيكل.
7. يجب عليك استخدام مفتاح التشغيل / الإيقاف لتشغيل الجهاز أو إيقاف تشغيله، ويحظر تشغيل الجهاز أو إيقاف تشغيله من خلال توصيل أو فصل سلك الطاقة، ولا تقم مطلقاً بتحديد طول سلك الطاقة لتجنب الحريق.
8. بالنسبة لهذا الجهاز (مع 5 كمبريسر)، لا تقلب الماكينة رأساً على عقب أو تميلها أكثر من 45 درجة



مبرد وموزع مياه موديل: اس اف 1413 دبليو دي بي اس

يرجى قراءة هذا الدليل بعناية قبل استخدام الجهاز

أسماء الأجزاء

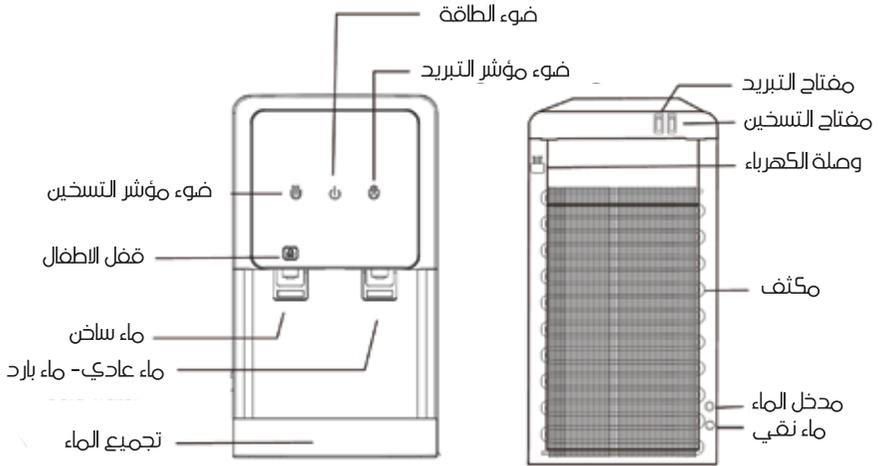

ملاحظات

هذا الجهاز مناسب لقارورة تتسع ما بين 3 أو 5 جالونات، لا تستخدم الماء العسر غير المحبى.
هذا الجهاز يعمل في بيئة ذات درجة حرارة تتراوح من 10 إلى 38 درجة مئوية، ونسبة رطوبة لا تزيد عن 90 %
كتلة الجليد: يرجى إزالة كتلة الجليد أولاً
إذا كان هذا الجهاز يعمل في بيئة ذات درجة حرارة أقل من 0 مئوية أو إذا لم يعمل منظم الحرارة، فسوف يتحول الماء إلى ثلج في خزان الماء البارد ويسد الأنبوب

مقدمة عن آلية العمل

1. يمكن لهذا الجهاز أن يلبى الحاجة في اعداد الشاي والقهوة والمشروبات الباردة، وهو مناسب للاستخدام في المنزل وفي الاماكن العامة
2. مع اعتماد تقنية العزل الحراري المميزة، يمكن لهذا الجهاز تقليل التبادل الحراري بين الماء الساخن والبارد

Thank you for purchasing **sanford** products, for the sake of excellent quality of our products, we certify that **sanford** products on this warranty are free of defect in material and workmanship and the end user is entitled to this warranty subject to the terms and conditions listed below.

- (1) The warranty will only be effective only if the warranty card is completed and returned to the company for the registration within 14days from the date of purchase, failing which might diminish the rights of warranty.
- (2) No other express warranty either written or oral is applicable to this product. THE DUARATION OF ANY IMPLIED WARRANTIES INCLUDING THE IMPLIED WARRANTY OF MERCAHNNTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY OF HEREIN. WE SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVINIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.
- (3) The warranty covers product failure only. If any product is found defective, **sanford** will at its option, repair the product in question. Any replaced parts will become the company's property.
- (4) The warranty does not apply to/if (a) the accessories provided with the product (b) cosmetic damage (c) damage due to improper use or maintenance (d) repair or attempted repair of the product by non-authorized persons (e) damage form accidents, lighting, water, fire, improper ventilation, misuse, alteration, or any cause beyond the control of **sanford** . (f) the type of the product is defaced, removed, altered, deleted or render illegible.
- (5) The company will not be liable for any loss directly or indirectly caused from breakdown of the equipment, also for any delay in repairing the set due to non-availability of components.
- (6) The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.
- (7) The warranty terms and conditions of this warranty certificate would be revised without prior notice.
- (8) **sanford** and its authorized service centers will make every effort to carry out expeditious repairs under this warranty as soon as possible.

Please visit us on **www.sanfordworld.com**
or write to us at **info@sanfordworld.com**




sanford®

THIS PRODUCT IS FOR DOMESTIC USE ONLY

LIMITED WARRANTY

sanford® here by warrants, subject to the terms and conditions herein below set forth that should this product become defective by reason of improper workmanship or material during the below specified warranty period, sanford® will repair the same, effecting all necessary parts replacement, without charge for either parts or labour.

WARRANTY PERIOD

PRODUCT	MODEL	DIVISION	LABOUR
	SF1413WD Water Dispenser	Personal or non-income producing Use: Commercial or income producing Use:	2 Years 90 Days

The information obtained from you may be used by sanford® or its affiliated companies for the purpose of direct mail including product information and/or special offers.

.....

sanford®

END USER'S COPY WARRANTY REGISTRATION CERTIFICATE


PERSONAL DETAILS:

Mr/Mrs/Ms* First Name: _____ Last Name: _____

Address: _____

Residence Tel No: _____ Office Tel No: _____ Mobile No: _____

Dealer Name : _____ Dealer Address: _____



Date of Purchase: _____

Invoice No: _____

Product Name : **Water Dispenser** Model No: **SF1413WD** Serial No: **1413032022**

Dealer's Stamp :
[Please mail back within 14 days from the date of purchase]

New life, New beginning
New Products!



NEW LIFE !
NEW BEGINNING !!
NEW PRODUCTS!!!





Entertainment
Collection



White Goods



Kitchen
Collection



Home Appliances



Personal
Gadgets



Electric Collection



Luminous Collections

sanford[®]

Electronics &
Home Appliances

2000 Plus Products

www.sanfordworld.com | info@sanfordworld.com

sanford[®]
TOUCHING YOUR LIFE EVERYDAY

Visit us on
www.sanfordworld.com

For more inquiry,
you may please write to us at
info@sanfordworld.com

صنع فى الصين